

PlayStation®Camera

Instruction Manual / 使用說明書 / 使用说明书 / 사용설명서
CUH-ZEY1 G

4-485-259-12(1)

EN

Precautions

Before using this product, carefully read this manual and any manuals for compatible hardware. Retain instructions for future reference.

Safety


- Keep this product out of the reach of small children. Small children may swallow small parts or may wrap the cables around themselves, which may inflict injury or cause an accident or a malfunction.
- Do not touch the product with wet hands.
- Never disassemble or modify the product.
- Check that there is no dust or foreign object on the connectors when connecting cables.
- Do not allow liquid or small particles to get into the product.
- Do not expose the product to dust, smoke or steam.
- Do not expose the product to high temperatures, high humidity or direct sunlight.

Use and handling

- Do not let any other metal items come in contact with the connectors.
- Do not place any objects on top of the product. Do not stand on the product.
- Do not throw or drop the product, or otherwise expose it to strong physical impact.
- Do not place the product on surfaces that are unstable, tilted or subject to vibration.
- Do not allow the product to come into contact with liquids.
- Follow the instructions below to help prevent the product exterior from deteriorating or becoming discolored.
 - Wipe with a soft, dry cloth.
 - Do not place any rubber or vinyl materials on the product exterior for an extended period of time.
 - Do not use solvents or other chemicals. Do not wipe with a chemically treated cleaning cloth.


Connecting and installing

Remove the protective film from the camera, and then place the camera at the front and center of the TV.

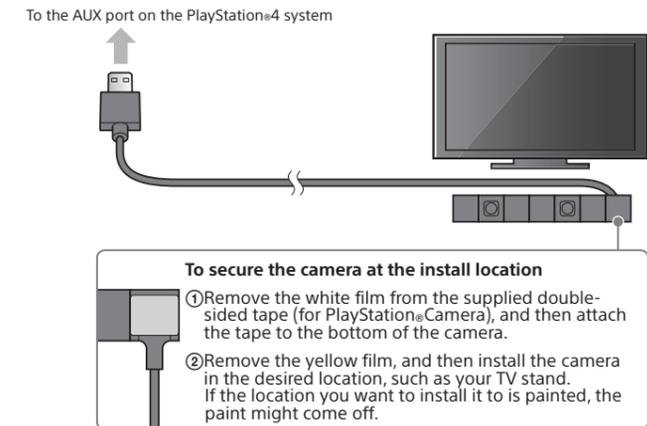

Hints

- If the camera is not recognized by the PS4™ system, disconnect the camera cable, and then reconnect it. If the camera is still not recognized, turn off the PS4™ system, and then turn it on again.
- If the dual lenses of the Camera become dirty, wipe them with a soft cloth.
- You can adjust the angle of the Camera up and down.

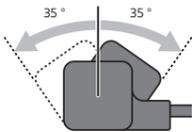

Specifications

External dimensions (width × height × depth)	Approx. 186 × 27 × 27 mm
Mass	Approx. 168 g
Video pixels (maximum)	1280 × 800 pixels × 2
Camera	Stereo camera
Camera range	30 cm ~ ∞/85 °
Microphones	4-channel microphone array
Cable length	Approx. 2 m
Operating temperature	5 °C - 35 °C (41 °F - 95 °F)

Design and specifications are subject to change without notice.

LIMITATIONS OF LIABILITY

Other than as expressly set forth by Sony Computer Entertainment Hong Kong Limited ("SCEH") or any other Sony entity, or their suppliers or authorised service facilities, except to the extent prohibited by applicable laws, SCEH or any other Sony entity, or their suppliers or authorised service facilities, shall not be liable for any damages, including special, incidental or consequential damages, or fees arising out of the use or inability to use this product.

CT

使用前須知事項

使用本產品前，請先詳細閱讀本使用說明書和對應裝置的所有說明書，並妥善保存，以備將來參考之用。

關於安全


- 請將本產品放在兒童拿不到的地方保管。兒童可能會吞下細小零件或用連接線纏繞自己，而造成身體損傷或導致意外發生、機器故障。
- 請勿用濕手觸摸本產品。
- 切勿分解，改造本產品。
- 連接時，請勿讓灰塵或異物堆積於端子四周。
- 請勿讓液體或小顆粒掉入本產品中。
- 請勿將本產品暴露在灰塵、煙霧或蒸氣中。
- 請勿將本產品放在高溫、濕氣極重或受日光直射的地方。

使用與保管

- 請勿讓金屬物品碰觸連接端子部位。
- 請勿在本產品上放置重物。請勿在本產品上站立。
- 請勿投擲或掉落本產品，或使其受到強烈的外力撞擊。
- 請勿將本產品放在傾斜、不平穩或易受振動的地方。
- 請勿讓本產品被液體沾濕。
- 請遵循以下使用說明，以免產品外殼變形或變色。
 - 使用乾淨軟布輕柔擦拭。
 - 切勿在產品外殼上長時間放置任何橡膠或乙烯基材質。
 - 切勿使用溶劑或其他化學藥劑。切勿使用經化學處理的擦布擦拭。


連接與安裝

請撕下攝影機的保護貼，安裝於電視機前方（中間）。

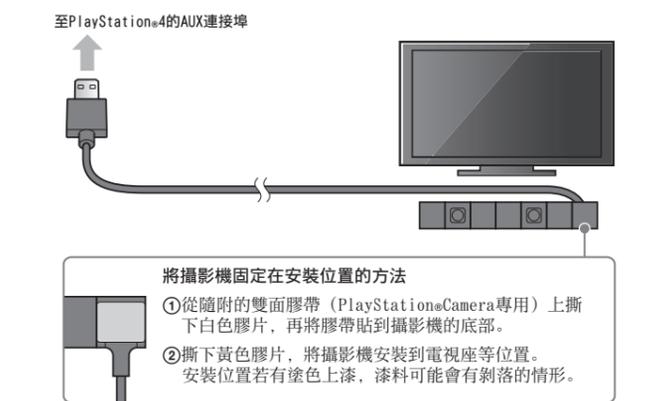

提示

- 若PS4™主機無法辨識攝影機，請拔除並重新連接攝影機的連接線。若主機仍無法辨識攝影機，請關閉PS4™主機的電源後再重新啟動。
- 弄髒攝影機的雙鏡頭時，請以柔軟的布擦拭。
- 可上下調整攝影機的角度。

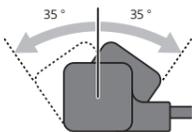

規格

外觀尺寸（寬×高×深）	約 186 × 27 × 27 mm
重量	約 168 g
影片像素（最大）	1280 × 800 像素 × 2
攝影機	立體攝影機
攝影範圍	30 cm ~ ∞ / 85 °
麥克風	四聲道陣列式麥克風
連接線長度	約 2 m
操作溫度	5 °C - 35 °C
電壓	DC 3.5 V

本公司保留在沒有事先通知情況下，變更設計或規格之權利。

