

PlayStation.

Wireless headset

Headset: CUHYA-0080

Wireless Adaptor: CUHYA-0081

Instruction Manual

For more instructions about the use of this product (including the Headset Companion app), visit playstation.com/helpme.

 
EN
Precautions
Before using this product, carefully read this manual and any manuals for compatible hardware. Retain instructions for future reference.
Safety
<ul style="list-style-type: none">Observe all warnings, precautions, and instructions. CHOKING HAZARD– Small parts. Keep out of the reach of small children.
Use and handling
<ul style="list-style-type: none">Stop using the wireless headset immediately if you begin to feel tired or if you experience discomfort or pain in your head while operating the wireless headset. Permanent hearing loss may occur if the headset is used at high volume. Set the volume to a safe level. Over time, increasingly loud audio may start to sound normal but can actually be damaging your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the sooner your hearing could be affected. To protect your hearing: <ul style="list-style-type: none">Limit the amount of time you use the headset at high volume. Avoid raising the volume to block out noisy surroundings. Lower the volume if you can't hear people speaking near you. If you feel that the headset is irritating your skin, stop using it immediately. Do not expose the headset to high temperatures, high humidity or direct sunlight. Do not put heavy objects on the headset. Do not allow liquid or small particles to get into the headset. Do not throw or drop the headset, or subject it to strong physical shock. Do not place any rubber or vinyl materials on the headset exterior for an extended period of time. Use a soft, dry cloth to clean the headset. Do not use solvents or other chemicals. Do not wipe with a chemically treated cleaning cloth. Do not disassemble or insert anything into the headset because this may cause damage to the internal components or cause injury to you. Observe all signs and instructions that require an electrical device or radio product to be switched off in designated areas, such as gas/refueling stations, hospitals, blasting areas, potentially explosive atmospheres or aircraft. The battery used in this device may present a risk of fire or chemical burn if misrreated. Do not disassemble, heat above 60 °C / 140 °F, or incinerate.

FR
Part names and functions
<p>Front</p> <ul style="list-style-type: none">Headband R marking SOUND/CHAT buttons <ul style="list-style-type: none">Adjust the chat voice volume in relation to the game sound. Microphone (integrated) <ul style="list-style-type: none">Avoid leaving the headphones near speakers while the microphone is on, because this may produce feedback (audio noise). Status indicator <ul style="list-style-type: none">Power/audio mode switch <ul style="list-style-type: none">Sets the audio mode or turns off headset. Positions: <ul style="list-style-type: none">OFF - turns off the headset 1 - Standard Mode 2 - Bass Boost Mode (default) This mode can be replaced with audio modes from the Headset Companion app.
<p>Rear</p> <ul style="list-style-type: none">L marking VSS (Virtual Surround Sound) button <ul style="list-style-type: none">The Virtual Surround Sound effect is on by default. Press and hold for more than one second to turn the VSS on or off. MUTE button <ul style="list-style-type: none">Press to switch microphone MUTE on and off. To engage the sidetone feature, hold down the MUTE button until a beep is heard. Then cycle through the sidetone volume settings (high, medium, off) by holding the MUTE button. Sidetone is a feature that allows you to hear your own voice from the headset. The sidetone volume is adjusted here, and not on the PS4™ system or other devices. When MUTE is on, the sidetone feature is turned off.
<p>Bottom</p> <ul style="list-style-type: none">VOL +/- buttons <ul style="list-style-type: none">Adjusts the volume of the headset. USB port <ul style="list-style-type: none">Connect to a supported USB device to charge the headset. Audio input jack <ul style="list-style-type: none">When the included audio cable is connected to the headset for use with mobile devices, the wireless function is turned off.
<p>Wireless adaptor</p> <ul style="list-style-type: none">Reset button Status indicator

ES
Precautions
Before using this product, carefully read this manual and any manuals for compatible hardware. Retain instructions for future reference.
Safety
<ul style="list-style-type: none">Observe all warnings, precautions, and instructions. CHOKING HAZARD– Small parts. Keep out of the reach of small children.
Use and handling
<ul style="list-style-type: none">Stop using the wireless headset immediately if you begin to feel tired or if you experience discomfort or pain in your head while operating the wireless headset. Permanent hearing loss may occur if the headset is used at high volume. Set the volume to a safe level. Over time, increasingly loud audio may start to sound normal but can actually be damaging your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the sooner your hearing could be affected. To protect your hearing: <ul style="list-style-type: none">Limit the amount of time you use the headset at high volume. Avoid raising the volume to block out noisy surroundings. Lower the volume if you can't hear people speaking near you. If you feel that the headset is irritating your skin, stop using it immediately. Do not expose the headset to high temperatures, high humidity or direct sunlight. Do not put heavy objects on the headset. Do not allow liquid or small particles to get into the headset. Do not throw or drop the headset, or subject it to strong physical shock. Do not place any rubber or vinyl materials on the headset exterior for an extended period of time. Use a soft, dry cloth to clean the headset. Do not use solvents or other chemicals. Do not wipe with a chemically treated cleaning cloth. Do not disassemble or insert anything into the headset because this may cause damage to the internal components or cause injury to you. Observe all signs and instructions that require an electrical device or radio product to be switched off in designated areas, such as gas/refueling stations, hospitals, blasting areas, potentially explosive atmospheres or aircraft. The battery used in this device may present a risk of fire or chemical burn if misrreated. Do not disassemble, heat above 60 °C / 140 °F, or incinerate.

FR
Part names and functions
<p>Front</p> <ul style="list-style-type: none">Headband R marking SOUND/CHAT buttons <ul style="list-style-type: none">Adjust the chat voice volume in relation to the game sound. Microphone (integrated) <ul style="list-style-type: none">Avoid leaving the headphones near speakers while the microphone is on, because this may produce feedback (audio noise). Status indicator <ul style="list-style-type: none">Power/audio mode switch <ul style="list-style-type: none">Sets the audio mode or turns off headset. Positions: <ul style="list-style-type: none">OFF - turns off the headset 1 - Standard Mode 2 - Bass Boost Mode (default) This mode can be replaced with audio modes from the Headset Companion app.
<p>Rear</p> <ul style="list-style-type: none">L marking VSS (Virtual Surround Sound) button <ul style="list-style-type: none">The Virtual Surround Sound effect is on by default. Press and hold for more than one second to turn the VSS on or off. MUTE button <ul style="list-style-type: none">Press to switch microphone MUTE on and off. To engage the sidetone feature, hold down the MUTE button until a beep is heard. Then cycle through the sidetone volume settings (high, medium, off) by holding the MUTE button. Sidetone is a feature that allows you to hear your own voice from the headset. The sidetone volume is adjusted here, and not on the PS4™ system or other devices. When MUTE is on, the sidetone feature is turned off.
<p>Bottom</p> <ul style="list-style-type: none">VOL +/- buttons <ul style="list-style-type: none">Adjusts the volume of the headset. USB port <ul style="list-style-type: none">Connect to a supported USB device to charge the headset. Audio input jack <ul style="list-style-type: none">When the included audio cable is connected to the headset for use with mobile devices, the wireless function is turned off.
<p>Wireless adaptor</p> <ul style="list-style-type: none">Reset button Status indicator

ES
Headset Companion app
With the Headset Companion app, you can see an additional audio mode for your headset. There are several modes to choose from, each optimized to enhance different audio characteristics. These modes are developed exclusively for use with PS4™ systems.
To get one of these audio modes, download the Headset Companion app from PlayStation™Store and follow the on-screen instructions.
Once this process is complete, you can experience your selected mode on your headset by sliding the power/audio mode switch to position "2".

FR
Resetting the headset
If the headset does not respond when you try to operate it, reset it by doing the following:
1 Connect the wireless adaptor to a PS4™ system or other powered USB port.

2 Insert a small pin or similar object (not included) into the hole surrounding the reset button in the wireless adaptor, and push in for at least one second.
3 On the headset, hold down the MUTE button and the VSS button.
4 While still holding down the MUTE button and the VSS button, slide the power/audio mode switch to position "2".
Rating label
The rating label contains specific model, manufacture and compliance information. It is located on the right earpad.
1 Remove the earpad and access the rating label:
1 Use one hand to hold the headset in place.
2 With your other hand, grip the earpad frame.
3 Pull the earpad out.
To replace the earpad, align the earpad with the inner frame. Push it back onto the frame until it clicks.

Rating label
End of life product recycling
The wireless headset is made of plastics, metals, and a lithium-ion battery. Follow local regulations when disposing of the wireless headset. Sony products can be recycled for free in the United States and Canada by dropping the product off at a number of nationwide locations. For details, visit www.sony.net/SonyInfo/csr/SonyEnvironment/spdoptlight/ .

FR
Part names and functions
<p>Front</p> <ul style="list-style-type: none">Headband R marking SOUND/CHAT buttons <ul style="list-style-type: none">Adjust the chat voice volume in relation to the game sound. Microphone (integrated) <ul style="list-style-type: none">Avoid leaving the headphones near speakers while the microphone is on, because this may produce feedback (audio noise). Status indicator <ul style="list-style-type: none">Power/audio mode switch <ul style="list-style-type: none">Sets the audio mode or turns off headset. Positions: <ul style="list-style-type: none">OFF - turns off the headset 1 - Standard Mode 2 - Bass Boost Mode (default) This mode can be replaced with audio modes from the Headset Companion app.
<p>Rear</p> <ul style="list-style-type: none">L marking VSS (Virtual Surround Sound) button <ul style="list-style-type: none">The Virtual Surround Sound effect is on by default. Press and hold for more than one second to turn the VSS on or off. MUTE button <ul style="list-style-type: none">Press to switch microphone MUTE on and off. To engage the sidetone feature, hold down the MUTE button until a beep is heard. Then cycle through the sidetone volume settings (high, medium, off) by holding the MUTE button. Sidetone is a feature that allows you to hear your own voice from the headset. The sidetone volume is adjusted here, and not on the PS4™ system or other devices. When MUTE is on, the sidetone feature is turned off.
<p>Bottom</p> <ul style="list-style-type: none">VOL +/- buttons <ul style="list-style-type: none">Adjusts the volume of the headset. USB port <ul style="list-style-type: none">Connect to a supported USB device to charge the headset. Audio input jack <ul style="list-style-type: none">When the included audio cable is connected to the headset for use with mobile devices, the wireless function is turned off.
<p>Wireless adaptor</p> <ul style="list-style-type: none">Reset button Status indicator

EN
Precautions
Before using this product, carefully read this manual and any manuals for compatible hardware. Retain instructions for future reference.
Safety
<ul style="list-style-type: none">Observe all warnings, precautions, and instructions. CHOKING HAZARD– Small parts. Keep out of the reach of small children.
Use and handling
<ul style="list-style-type: none">Stop using the wireless headset immediately if you begin to feel tired or if you experience discomfort or pain in your head while operating the wireless headset. Permanent hearing loss may occur if the headset is used at high volume. Set the volume to a safe level. Over time, increasingly loud audio may start to sound normal but can actually be damaging your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the sooner your hearing could be affected. To protect your hearing: <ul style="list-style-type: none">Limit the amount of time you use the headset at high volume. Avoid raising the volume to block out noisy surroundings. Lower the volume if you can't hear people speaking near you. If you feel that the headset is irritating your skin, stop using it immediately. Do not expose the headset to high temperatures, high humidity or direct sunlight. Do not put heavy objects on the headset. Do not allow liquid or small particles to get into the headset. Do not throw or drop the headset, or subject it to strong physical shock. Do not place any rubber or vinyl materials on the headset exterior for an extended period of time. Use a soft, dry cloth to clean the headset. Do not use solvents or other chemicals. Do not wipe with a chemically treated cleaning cloth. Do not disassemble or insert anything into the headset because this may cause damage to the internal components or cause injury to you. Observe all signs and instructions that require an electrical device or radio product to be switched off in designated areas, such as gas/refueling stations, hospitals, blasting areas, potentially explosive atmospheres or aircraft. The battery used in this device may present a risk of fire or chemical burn if misrreated. Do not disassemble, heat above 60 °C / 140 °F, or incinerate.

FR
Part names and functions
<p>Front</p> <ul style="list-style-type: none">Headband R marking SOUND/CHAT buttons <ul style="list-style-type: none">Adjust the chat voice volume in relation to the game sound. Microphone (integrated) <ul style="list-style-type: none">Avoid leaving the headphones near speakers while the microphone is on, because this may produce feedback (audio noise). Status indicator <ul style="list-style-type: none">Power/audio mode switch <ul style="list-style-type: none">Sets the audio mode or turns off headset. Positions: <ul style="list-style-type: none">OFF - turns off the headset 1 - Standard Mode 2 - Bass Boost Mode (default) This mode can be replaced with audio modes from the Headset Companion app.
<p>Rear</p> <ul style="list-style-type: none">L marking VSS (Virtual Surround Sound) button <ul style="list-style-type: none">The Virtual Surround Sound effect is on by default. Press and hold for more than one second to turn the VSS on or off. MUTE button <ul style="list-style-type: none">Press to switch microphone MUTE on and off. To engage the sidetone feature, hold down the MUTE button until a beep is heard. Then cycle through the sidetone volume settings (high, medium, off) by holding the MUTE button. Sidetone is a feature that allows you to hear your own voice from the headset. The sidetone volume is adjusted here, and not on the PS4™ system or other devices. When MUTE is on, the sidetone feature is turned off.
<p>Bottom</p> <ul style="list-style-type: none">VOL +/- buttons <ul style="list-style-type: none">Adjusts the volume of the headset. USB port <ul style="list-style-type: none">Connect to a supported USB device to charge the headset. Audio input jack <ul style="list-style-type: none">When the included audio cable is connected to the headset for use with mobile devices, the wireless function is turned off.
<p>Wireless adaptor</p> <ul style="list-style-type: none">Reset button Status indicator

EN
Precautions
Before using this product, carefully read this manual and any manuals for compatible hardware. Retain instructions for future reference.
Safety
<ul style="list-style-type: none">Observe all warnings, precautions, and instructions. CHOKING HAZARD– Small parts. Keep out of the reach of small children.
Use and handling
<ul style="list-style-type: none">Stop using the wireless headset immediately if you begin to feel tired or if you experience discomfort or pain in your head while operating the wireless headset. Permanent hearing loss may occur if the headset is used at high volume. Set the volume to a safe level. Over time, increasingly loud audio may start to sound normal but can actually be damaging your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the sooner your hearing could be affected. To protect your hearing: <ul style="list-style-type: none">Limit the amount of time you use the headset at high volume. Avoid raising the volume to block out noisy surroundings. Lower the volume if you can't hear people speaking near you. If you feel that the headset is irritating your skin, stop using it immediately. Do not expose the headset to high temperatures, high humidity or direct sunlight. Do not put heavy objects on the headset. Do not allow liquid or small particles to get into the headset. Do not throw or drop the headset, or subject it to strong physical shock. Do not place any rubber or vinyl materials on the headset exterior for an extended period of time. Use a soft, dry cloth to clean the headset. Do not use solvents or other chemicals. Do not wipe with a chemically treated cleaning cloth. Do not disassemble or insert anything into the headset because this may cause damage to the internal components or cause injury to you. Observe all signs and instructions that require an electrical device or radio product to be switched off in designated areas, such as gas/refueling stations, hospitals, blasting areas, potentially explosive atmospheres or aircraft. The battery used in this device may present a risk of fire or chemical burn if misrreated. Do not disassemble, heat above 60 °C / 140 °F, or incinerate.

 
FR
Part names and functions
<p>Front</p> <ul style="list-style-type: none">Headband R marking SOUND/CHAT buttons <ul style="list-style-type: none">Adjust the chat voice volume in relation to the game sound. Microphone (integrated) <ul style="list-style-type: none">Avoid leaving the headphones near speakers while the microphone is on, because this may produce feedback (audio noise). Status indicator <ul style="list-style-type: none">Power/audio mode switch <ul style="list-style-type: none">Sets the audio mode or turns off headset. Positions: <ul style="list-style-type: none">OFF - turns off the headset 1 - Standard Mode 2 - Bass Boost Mode (default) This mode can be replaced with audio modes from the Headset Companion app.
<p>Rear</p> <ul style="list-style-type: none">L marking VSS (Virtual Surround Sound) button <ul style="list-style-type: none">The Virtual Surround Sound effect is on by default. Press and hold for more than one second to turn the VSS on or off. MUTE button <ul style="list-style-type: none">Press to switch microphone MUTE on and off. To engage the sidetone feature, hold down the MUTE button until a beep is heard. Then cycle through the sidetone volume settings (high, medium, off) by holding the MUTE button. Sidetone is a feature that allows you to hear your own voice from the headset. The sidetone volume is adjusted here, and not on the PS4™ system or other devices. When MUTE is on, the sidetone feature is turned off.
<p>Bottom</p> <ul style="list-style-type: none">VOL +/- buttons <ul style="list-style-type: none">Adjusts the volume of the headset. USB port <ul style="list-style-type: none">Connect to a supported USB device to charge the headset. Audio input jack <ul style="list-style-type: none">When the included audio cable is connected to the headset for use with mobile devices, the wireless function is turned off.
<p>Wireless adaptor</p> <ul style="list-style-type: none">Reset button Status indicator

ES	
Specifications	
Input power rating	500 mW (Wireless headset) <p>500 mW (Wireless adaptor)</p>
Battery type	Built-in lithium-ion rechargeable battery
Battery voltage	3.7 V
Battery capacity	570 mAh
Operating environment temperature	5 °C - 35 °C / 41 °F - 95 °F
Dimensions (w/h/d)	Wireless headset: 201 x 172 x 91 mm (7.9 x 6.8 x 3.6 in) <p>Wireless adaptor: 48 x 18 x 8 mm (1.9 x 0.7 x 0.3 in)</p>
Mass	Wireless headset: 230 g (8.6 oz) <p>Wireless adaptor: 6 g (0.19 oz)</p>
Communication system	2.4 GHz RF
Maximum communication range	Approx. 10 m (33 ft) ¹
Use time when fully charged	7+ hours at mid volume level ²
Contents	Wireless headset (1) <p>Wireless adaptor (1)</p> <p>Audio cable 1.2 m (3.9 ft) (1)</p> <p>USB Cable (Type-A to Micro-B) 30.5 cm (1 ft) (1)</p> <p>Quick Start Guide (1)</p> <p>Instruction Manual (1)</p>
Country of origin	China

¹ Actual communication range varies depending on factors such as obstacles between the headset and wireless adaptor, magnetic fields from electronics (such as a microwave oven), static electricity, antenna performance, and the operating system and software applications in use. Depending on the operating environment, reception may be interrupted.

² Actual use time varies depending on factors such as the battery charge and ambient temperature.

Design and specifications are subject to change without notice.

FR
Initial setup
1 Charge the headset by connecting it to a USB port with a USB cable. The headset may need up to 3.5 hours to charge fully.

2 Insert the wireless adaptor into the USB port.
3 Slide the power switch on the headset to position "1" or "2".
Using the headset with PlayStation 4 systems
This headset is compatible with PS4™ system software version 5.00 or later. More than one headset can be used with a PS4™ system.
Always update your system software to the latest version.
Status display
When first connecting to a PS4™ system or when changing the settings, the following status information is displayed in the upper left corner of the screen:




Stereo Headset Audio Extension is a system setting that controls the type of audio output to the wireless headset. It is available only when the wireless adaptor is inserted.

	Displayed when Virtual Surround Sound is enabled
	Displays volume level
	Displayed when the microphone is turned off
	Displays battery charge level

	Displayed when Virtual Surround Sound is enabled
	Displays volume level
	Displayed when the microphone is turned off
	Displays battery charge level

On a PS4™ system, the wireless headset defaults to "ON" [All Audio].

Audio output selection

With the wireless headset you can listen to audio from the PS4™ system—including music, videos, and games—in Virtual Surround Sound.

– You can listen to both game audio and chat audio simultaneously.

Use the SOUND/CHAT buttons to adjust the relative volume of game audio versus chat audio.

– You can change the audio output to the headset so that you can hear only chat audio.

To change the audio output select  (Settings) =>  (Devices) =>  (Audio Devices) => 

Output to Headphones	VSS (Virtual Surround Sound) button	SOUND/CHAT buttons
All Audio	Enabled	Enabled
Chat Audio	Disabled	Disabled

NOTE:

On a PS4™ system, the wireless headset defaults to "ON" [All Audio].

Using the headset with a computer

You can use the headset with a PC (with Windows® or macOS) that has a USB port. Insert the wireless adaptor into a USB port on the computer you want to use and then turn on the headset.

Hints
<ul style="list-style-type: none">The headset might not work with some computers. The VSS (Virtual Surround Sound) button and SOUND/CHAT buttons can be used only when the headset is connected to a PS4™ system.

Using your headset with PlayStation VR

You can use an audio cable to connect your headset to the stereo headphone jack of PlayStation VR. This will output all game audio processed by the PlayStation VR, including 3D audio if supported by the game title.

Note

This headset only supports stereo or 7.1 virtual surround sound. 3D audio is supported on this headset only when plugged into the PS VR, while playing a PS VR game that supports 3D audio.

Note

This headset only supports stereo or 7.1 virtual surround sound. 3D audio is supported on this headset only when plugged into the PS VR, while playing a PS VR game that supports 3D audio.

Note

This headset only supports stereo or 7.1 virtual surround sound. 3D audio is supported on this headset only when plugged into the PS VR, while playing a PS VR game that supports 3D audio.

Note

This headset only supports stereo or 7.1 virtual surround sound. 3D audio is supported on this headset only when plugged into the PS VR, while playing a PS VR game that supports 3D audio.

Note

This headset only supports stereo or 7.1 virtual surround sound. 3D audio is supported on this headset only when plugged into the PS VR, while playing a PS VR game that supports 3D audio.

Note

This headset only supports stereo or 7.1 virtual surround sound. 3D audio is supported on this headset only when plugged into the PS VR, while playing a PS VR game that supports 3D audio.

Note

This headset only supports stereo or 7.1 virtual surround sound. 3D audio is supported on this headset only when plugged into the PS VR, while playing a PS VR game that supports 3D audio.

Note

This headset only supports stereo or 7.1 virtual surround sound. 3D audio is supported on this headset only when plugged into the PS VR, while playing a PS VR game that supports 3D audio.

Note

This headset only supports stereo or 7.1 virtual surround sound. 3D audio is supported on this headset only when plugged into the PS VR, while playing a PS VR game that supports 3D audio.

Note

This headset only supports stereo or 7.1 virtual surround sound. 3D audio is supported on this headset only when plugged into the PS VR, while playing a PS VR game that supports 3D audio.

Note

This headset only supports stereo or 7.1 virtual surround sound. 3D audio is supported on this headset only when plugged into the PS VR, while playing a PS VR game that supports 3D audio.

Note

This headset only supports stereo or 7.1 virtual surround sound. 3D audio is supported on this headset only when plugged into the PS VR, while playing a PS VR game that supports 3D audio.

Note

This headset only supports stereo or 7.1 virtual surround sound. 3D audio is supported on this headset only when plugged into the PS VR, while playing a PS VR game that supports 3D audio.

Note

This headset only supports stereo or 7.1 virtual surround sound. 3D audio is supported on this headset only when plugged into the PS VR, while playing a PS VR game that supports 3D audio.

Note

This headset only supports stereo or 7.1 virtual surround sound. 3D audio is supported on this headset only when plugged into the PS VR, while playing a PS VR game that supports 3D audio.

Note

This headset only supports stereo or 7.1 virtual surround sound. 3D audio is supported on this headset only when plugged into the PS VR, while playing a PS VR game that supports 3D audio.

Note

This headset only supports stereo or 7.1 virtual surround sound. 3D audio is supported on this headset only when plugged into the PS VR, while playing a PS VR game that supports 3D audio.

Note

This headset only supports stereo or 7.1 virtual surround sound.

