

SONY®



PS VITA™

PlayStation Vita

AC Adaptor 交流電轉換器

Instruction Manual / 使用說明書

PCH-ZAC1 H / PCH-ZAC1 T

4-414-739-11(1)

EN

Precautions

To ensure the safe use of this product, carefully read this instruction manual and the PlayStation®Vita instruction manual before using it and save the manuals for future reference. The parents or guardians of small children should read the manuals for them to ensure that they use the product safely.

Safety

- Keep this product out of the reach of small children. Small children may swallow small parts or may wrap the cables around themselves, which may inflict injury or cause an accident or a malfunction.
- Unplug the AC power cord from the electrical outlet before cleaning or when you do not intend to use the system for an extended period of time.
- Do not touch the product with wet hands.
- Do not connect the AC power cord to a voltage transformer or inverter. Connecting the AC power cord to a voltage transformer for overseas travel or an inverter for use in an automobile may cause heat to build up in the system and may cause burns or a malfunction.
- Never disassemble or modify the product.

- Do not allow water or small particles to get into the product.
- Do not expose the product to dust, smoke or steam.
- Do not expose the product to high temperatures, high humidity or direct sunlight.
- Do not use the product when it is covered by a cloth. Heat could be trapped causing fire or malfunction.
- Do not touch the product if connected to an electrical outlet during an electrical storm.
- Do not touch the product for an extended period of time while in use.
- Do not use a power cord other than the supplied AC power cord. Do not modify the cord.

Use and handling

- Do not allow any metal to touch the connectors.
- Do not place any objects on top of the product. Do not stand on the product.
- Do not throw or drop the product, or otherwise expose it to strong physical impact.
- Do not place the product on surfaces that are unstable, tilted or subject to vibration.
- Do not allow the product to come into contact with liquids.
- Follow the instructions below to help prevent the product exterior from deteriorating or becoming discoloured.
 - Wipe with a soft, dry cloth.
 - Do not place any rubber or vinyl materials on the product exterior for an extended period of time.
 - Do not use solvents or other chemicals. Do not wipe with a chemically-treated cleaning cloth.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.

Specifications

Input	AC 100 – 240V, 50/60Hz
Output	DC 5V, 1500mA (1.5A)
Operating temperature	5 °C – 35 °C (41 °F – 95 °F)
External dimensions (w × h × d)	Approx. 45×22×68mm (1.8×0.9×2.7in)
Weight	Approx. 51g

Design and specifications are subject to change without notice.

LIMITATIONS OF LIABILITY

Other than as expressly set forth by Sony Computer Entertainment Hong Kong Limited ("SCEH") or any other Sony entity, or their suppliers or authorised service facilities, except to the extent prohibited by applicable laws, SCEH or any other Sony entity, or their suppliers or authorised service facilities, shall not be liable for any damages, including special, incidental or consequential damages, or fees arising out of the use or inability to use this product.

使用前須知事項

使用本產品以前，請先詳細閱讀本說明書，並妥善保存，以備將來參考之用。同時並請參閱PlayStation®Vita主機的使用說明書。未成年人請在監護人的陪同下閱讀，並安全使用。

關於安全

- 請將本產品放在兒童拿不到的地方保管。兒童可能會吞下細小零件，或用連接線纏繞自己，造成人身損傷或導致意外發生、機器故障。
- 在您準備開始清潔或打算長時間不使用本產品時，請自電源插座拔出交流電源線。
- 請勿用濕手觸摸本產品。
- 請勿使用本產品連接變壓器或反相器。將交流電源線插入海外旅行者使用的變壓器或汽車專用的反相器，可能會導致本產品發熱，並造成灼傷或故障。
- 切勿分解，改造本產品。
- 請勿讓液體或小顆粒掉入本產品中。
- 請勿將本產品暴露在灰塵、煙霧或蒸氣中。
- 請勿將本產品放在高溫、濕氣極重或受日光直射的地方。
- 請勿於使用布等物品覆蓋本產品時使用，否則可能會導致火災或故障。
- 請勿在雷雨天氣中觸摸本產品。
- 本產品已連接至電源插座時，請勿長時間觸摸本產品。
- 請勿使用隨附之交流電源線以外的其他電源線。且切勿改造該電源線。

使用與保管

- 請勿讓端子部分觸碰到其他金屬物體。
- 請勿在本產品上放置重物。請勿在本產品上站立。
- 請勿投擲或掉落本產品，或使其受到強烈的外力撞擊。
- 請勿將本產品放置在不平穩、傾斜或易受震動的地方。
- 請勿讓本產品被液體沾濕。
- 請遵循以下使用說明，以免產品外殼變形或變色。
 - 使用乾淨軟布輕柔擦拭。
 - 切勿在產品外殼上長時間放置任何橡膠或乙烯基材質。
 - 切勿使用溶劑或其他化學藥劑。切勿使用經化學處理的擦布擦拭。
- 請插入接近且容易連接的電源插座。

規格

輸入	AC 100 - 240V, 50/60Hz
輸出	DC 5V, 1500mA (1.5A)
操作溫度	5°C - 35°C (41°F - 95°F)
外觀尺寸 (寬×高×深)	約45×22×68mm (1.8×0.9×2.7in)
重量	約51g

本公司保留在沒有事先通知情況下，變更設計或規格之權利。

免責聲明


除Sony Computer Entertainment Hong Kong Limited (簡稱SCEH)、其他Sony相關單位，以及經其正式認可之製造廠商或售後服務機構已明文規定之項目外，對於任何由於使用或無法使用本產品而造成的損害（包括和種特殊、偶發或後果性損害）或所衍生的費用，除適用法律禁止外，SCEH或任何其他Sony相關單位或其正式認可之製造廠商或售後服務機構，概不承擔任何責任。

Removing the 3-pin converting adaptor (PCH-ZAC1 H only)

Electrical outlet configuration may vary depending on the region of use. If the plug on the supplied AC power cord does not match the electrical outlet, loosen the screw and remove the converting adaptor.

拆除3插針電源插頭轉換器(僅限 PCH-ZAC1 H)

電源插座的形狀因地區而異。若預裝於交流電源線上的插頭形狀與您府上的電源插座不相容時，請鬆開螺絲並拆掉電源插頭轉換器。

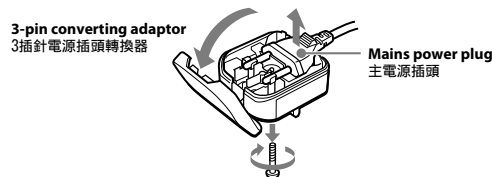

製造年份：請見產品本體標示

製造號碼：請見產品本體標示

"PS" and "PlayStation" are registered trademarks of Sony Computer Entertainment Inc. "PSVITA" is a trademark of the same company.

"SONY" and "PS" are registered trademarks of Sony Corporation.

"PS" and "PlayStation" 為 Sony Computer Entertainment Inc. 之註冊商標。"PSVITA" 亦為該公司之商標。

"SONY" 和 "PS" 為 Sony Corporation 之註冊商標。

