

SONY®



DVD Remote Control *(for PlayStation®2) with IR Receiver Unit*

PlayStation®2 専用 DVD 遙控器
(內附紅外線接收系統)

DVD 리모컨 키트
(PlayStation®2 전용)

Instruction Manual

Thank you for purchasing the DVD remote control (for PlayStation®2) with IR Receiver Unit. Before using this product, carefully read this manual and retain it for future reference. This DVD remote control is exclusively for use with the PlayStation®2 computer entertainment system.

使用說明書

感謝您購買 PlayStation®2 專用 DVD 遙控器（內附紅外線接收系統）。在使用本產品以前，請先詳細閱讀本使用說明書，並妥善保存，以備將來參考之用。本遙控器只對應 PlayStation®2 電腦娛樂系統。

사용 설명서

DVD 리모컨 키트(PlayStation®2 전용)를 구입해 주셔서 감사합니다.
본 DVD 리모컨은 PlayStation®2 컴퓨터 엔터테인먼트 시스템에만 사용할 수 있습니다. 본 제품을 사용하기 전에 사용 설명서를 잘 읽어보시고, 나중에 참조하실 수 있도록 잘 보관하십시오.

PlayStation®2

SCPH-10174

3-069-287-41(1)

Precautions

This product has been designed with the highest concern for safety. However, any electrical device, if used improperly, has the potential for causing fire, electrical shock or personal injury. To ensure accident-free operation, be sure to follow these guidelines.

- Do not use the device if it functions in an abnormal manner.
- Keep the IR receiver unit (for PlayStation®2) in a place out of the reach of small children. If swallowed, the IR receiver unit can cause choking.
- Never disassemble or modify the DVD remote control or IR receiver unit.
- Keep the DVD remote control and IR receiver unit away from heat and dust, and from smoky, greasy or humid locations.
- Do not leave the DVD remote control or IR receiver unit on the floor.
- Do not allow liquid or small particles to get into the DVD remote control or IR receiver unit.
- Dispose of all packaging materials and worn-out products properly.
- If the device does not function properly, contact the appropriate PlayStation® customer service number in each country/area.

Table of contents

Precautions	2
-------------------	---

Setup 4

Before use	4
Notes on use	4
Inserting batteries into the DVD remote control (for PlayStation®2)	5
Attaching the IR receiver unit (for PlayStation®2)	6

Viewing a DVD video 7

Playback of a DVD video	7
When the DVD video is finished	8
Operating the DVD Player	8
Operating with the Control Panel	9
Operating with the DVD remote control (for PlayStation®2)	13
Playback from the last stopping point (Resume Play)	15
Playback in desired order (Program Play)	16
Playback in random order (Shuffle Play)	18
Repeated playback (Repeat Play)	19
Repeated playback of a selected section (A↔B Repeat)	20

Using the Control Panel 21

Selecting a specific scene for playback	22
Displaying title and chapter numbers	23
Finding a particular point on a disc (Search)	24

Troubleshooting ... 25

Specifications 27

GB

Setup

● *Before use*

Please confirm that you have the following items:

- DVD remote control (for PlayStation®2) (1)
- IR receiver unit (for PlayStation®2) (1)
- Size AAA batteries (2)
- Instruction manual (1)

If any items are missing, please contact the appropriate PlayStation® customer service number in each country/area.

● *Notes on use*

- Some PlayStation®2 or PlayStation® format software may not function properly when operated using the DVD remote control (for PlayStation®2).
- The DVD remote control will not work if you push more than one button at a time.
- Two or more DVD remote controls or IR receiver units should not be used at the same time.
- Do not expose the DVD remote control or IR receiver unit to high temperatures, high humidity or direct sunlight (use in an environment where temperatures range 5°C - 35°C/41°F - 95°F).
- Do not put heavy objects on the DVD remote control or IR receiver unit.
- Do not throw or drop the DVD remote control or IR receiver unit, or subject either item to strong physical shock.
- Do not touch the metal parts or insert foreign objects into the IR receiver unit.
- When cleaning the DVD remote control or IR receiver unit, use a soft, dry cloth. Do not use paint thinner, solvents or other chemicals.
- Static, non-moving images, such as DVD menus, configuration displays, or images “paused” may leave a faint image permanently on the TV screen if left on for extended periods of time. Projection TVs are more susceptible to this than other types of displays. Do not operate the PlayStation®2 console in such a manner that this could occur.


- If you view DVD video with DVD Player (for PlayStation®2) earlier than version 2.00, some functions of the DVD remote control will not be available.

To confirm the version of your DVD Player, press the Δ button in the Main menu, and check the "DVD Player" field of the "Version Information" screen.

For details, refer to the instruction manual for the PlayStation®2 console.

● **Inserting batteries into the DVD remote control (for PlayStation®2)**

Insert the two size AAA batteries (supplied) into the DVD remote control paying attention to the plus and minus ends (polarity) as indicated in the battery compartment.

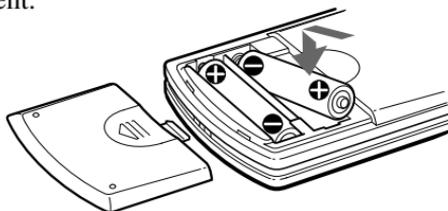


Notes

- Incorrect use of batteries can result in battery content leakage or explosion. When using batteries, be sure to abide by the following instructions:
 - Make sure that the plus and minus ends of the batteries are inserted in the correct directions.
 - Do not mix old and new or different types of batteries.
 - Do not attempt to recharge non-rechargeable type batteries.
 - Remove the batteries when the DVD remote control will not be used for an extended period of time.
 - If battery contents have leaked, be sure to carefully remove all residue before inserting new batteries.
- When using the DVD remote control, be sure that the IR receiver of the IR receiver unit is not in direct sunlight or exposed to other strong light. The DVD remote control may not function properly under such conditions.

Setup (continued)

● Attaching the IR receiver unit (for PlayStation®2)

Holding the IR receiver unit with the arrow mark facing up, securely insert the connector into a controller port of the PlayStation®2 console.

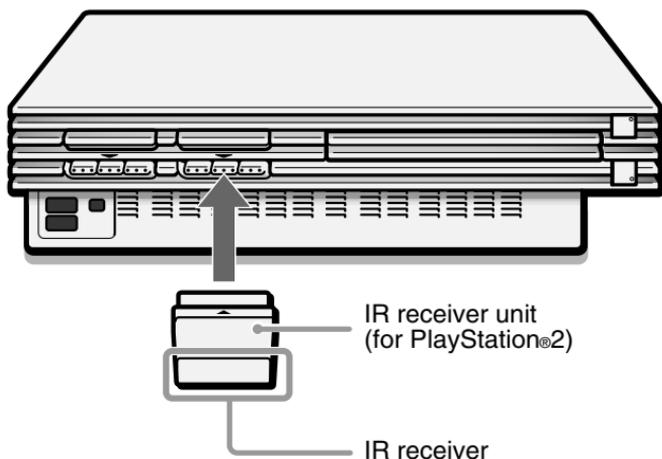

Note

When using the IR receiver unit for the first time, be sure to remove the protective scratch resistant film before inserting the unit into the PlayStation®2 console.

Viewing a DVD video

● Playback of a DVD video

- 1 Press the MAIN POWER switch on the PlayStation®2 console rear to turn the console on.
- 2 Press the  (standby)/RESET button.
- 3 Press the  (open) button.
- 4 Insert the DVD video you would like to play into the disc tray with the label side facing up (data side down).
- 5 Press the  button.

The disc tray will close and playback will begin.

Notes

- With some discs, playback will not begin immediately, but a Title menu or DVD menu will be displayed.
- After the DVD video has finished playing, press the  button on the console to eject the disc and display the browser screen.
- If the power is turned off during playback, any optional settings you have made will be lost.

Viewing a DVD video (continued)

Notes on the playback of DTS audio from a DVD video

DTS audio signal can only be output through an optical digital cable (sold separately). Please note that it cannot be output through a regular audio cable.

- Do not set the “DTS” option of “Audio Digital Out” under “Audio Setup” to “On” when using an audio component that does not have a built-in DTS decoder. In such cases, if you play a DTS audio track, a loud noise (or no noise) will come from the speakers, possibly hurting your ears or damaging the speakers.
- When the “DTS” option of “Audio Digital Out” under “Audio Setup” is set to “Off”, the DVD’s DTS audio output will not be played back, even if you connect with an optical digital cable.

● *When the DVD video is finished*

- 1 Press the \triangle (open) button on the PlayStation®2 console.**
- 2 Remove the disc.**
- 3 Press the \triangle button.**
- 4 Press and hold the \odot (standby)/RESET button for about two seconds.**

Note: After changing DVD settings

To save your changes, be sure to eject the DVD before pressing the \odot /RESET button or turning off the console with the MAIN POWER switch. Please note that changes will not be saved if you reset or turn off the console without first ejecting the DVD.

● *Operating the DVD Player*

The DVD Player can be operated in the following three ways:

- through the on-screen Control Panel
- directly with the DVD remote control
- directly with the analog controller (DUALSHOCK®2).

For details, refer to “Playing a DVD video” in the PlayStation®2 console instruction manual.

Notes

- Depending on the disc used, some operations may vary or may not be possible.
- The method of operation for certain functions may vary depending on whether the IR receiver unit is inserted into the PlayStation®2 console or not.

● *Operating with the Control Panel*


The Control Panel can be used to search for a specific scene, to playback scenes in a different order, to change viewing angle, and so on.

The actual functions available may vary from disc to disc.

For more information on the Control Panel, see the detailed explanations in the PlayStation®2 console instruction manual.

Direct item selection is also available.

A number of items can be directly selected using the buttons of the DVD remote control. In this case, only the selected items will be displayed. For more details, see “Using the DVD remote control (for PlayStation®2)” on page 13.

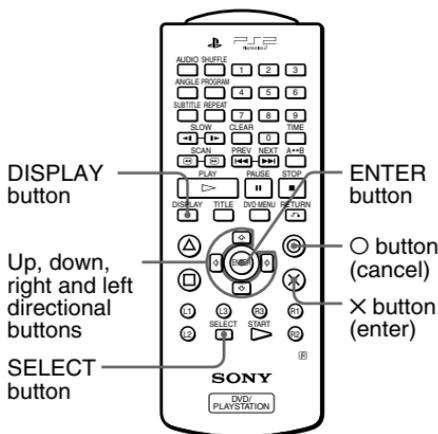

Viewing a DVD video (continued)

- 1 Press the **DISPLAY** or **SELECT** button of the DVD remote control.

The Control Panel is displayed on the screen.



- 2 Use the directional buttons to move to the desired item.
- 3 Press the **×** (enter) button.

Note

The **×** button and the **ENTER** button of the DVD remote control can all be used as the **ENTER** button. For convenience, this manual will explain using the **×** button only.




- 1**  **DVD Menu**
Displays the DVD menu.
- 2**  **Title Menu**
Displays the Title menu.
- 3**  **Return**
Returns to the previously displayed screen.
- 4**  **Audio Options**
Displays and changes audio options.
- 5**  **Angle Options**
Displays and changes viewing angle options.
- 6**  **Subtitle Options**
Displays and changes subtitle options.
- 7**  **Go to Title**
You can skip to a different title or chapter by specifying the elapsed time or selecting the title or chapter number with the number buttons.

Viewing a DVD video (continued)

- 8**  **Setup**
Using the Setup display, you can change the initial settings, adjust the picture and sound, and set various other output options. For DVD viewing, you can also choose a language for subtitles, restrict playback by children, and so on.
- 9**  **Chapter Display**
While playing a disc, the current title and chapter numbers can be displayed.
- 10** **? Help**
Displays the direct button functions of the Analog Controller (DUALSHOCK®2).
- 11** **Go to Chapter/Number Buttons**
The desired chapter number or numerical value can be selected.
- 12**  **Previous**
Skips back to the beginning of the current or previous chapter.
- 13**  **Search**
You can locate a particular point on the DVD quickly by monitoring the picture.
- 14**  **Next**
Skips to the beginning of the next chapter.
- 15**  **Play**
Selects playback.
- 16**  **Pause**
Momentarily stops playback.
- 17**  **Stop**
Stops playback of the DVD.
- 18**  **Slow**
Selects slow playback of the on-screen image.

● Operating with the DVD remote control (for PlayStation®2)

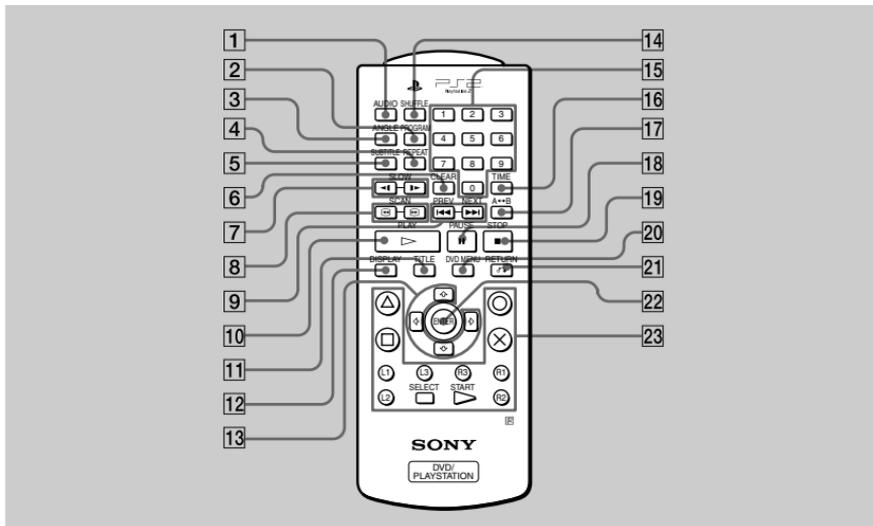

GB

- 1 AUDIO button**
Displays and changes audio options.
- 2 PROGRAM button**
Selects programmed playback.
- 3 ANGLE button**
Displays and changes viewing angle options.
- 4 REPEAT button**
Selects repeated playback.
- 5 SUBTITLE button**
Displays and changes subtitle options.
- 6 CLEAR button**
Clears selected numbers or playback modes.
- 7 ◀▶ SLOW buttons**
Select slow playback of the on-screen image.
- 8 ◀▶ SCAN buttons**
You can locate a particular point on the DVD quickly by monitoring the picture.

Viewing a DVD video (continued)

- 9 **◀◀/▶▶ PREV/NEXT buttons**
Skip to the beginning of either the previous or next chapter.
- 10 **▷ PLAY button**
Selects playback.
- 11 **TITLE button**
Displays the Title menu.
- 12 **DISPLAY button**
Displays the Control Panel.
- 13 **Directional buttons**
Used to select items from the on-screen display.
- 14 **SHUFFLE button**
Selects playback in a random order.
- 15 **Number buttons**
Allow for numerical selection of items in the on-screen display.
- 16 **TIME button**
Displays the playing time.
- 17 **A↔B button**
Selects repeated playback of a specific section.
- 18 **|| PAUSE button**
Momentarily stops playback.
- 19 **■ STOP button**
Stops playback of the DVD.
- 20 **DVD MENU button**
Displays the DVD menu.
- 21 **↶ RETURN button**
Returns to the previously displayed screen.
- 22 **ENTER button**
Enters the item selected on the screen.
- 23 **Buttons identical with those on the analog controller (DUALSHOCK®2) perform the same functions as the matching controller buttons.**

● *Playback from the last stopping point (Resume Play)*


- 1 During playback, press the ■ STOP or ○ button on the DVD remote control to stop play.

The message, “Press [Play] to resume viewing. To start from the beginning, press [Stop] and then [Play].” will appear on the screen.

- 2 Press the ▷ PLAY button on the DVD remote control.

Playback begins from the point in step 1 where it was stopped.

Using the Control Panel

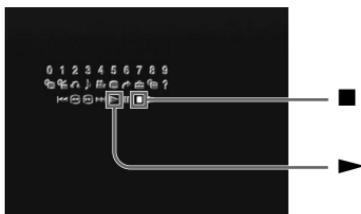

- 1 During playback, use the directional buttons to move to the ■ (Stop) icon of the Control Panel and press the × button to stop playback.
- 2 Select the ▶ (Play) icon and press the × button.

Playback begins from the point in step 1 where it was stopped.

Notes

- To play the disc from the beginning, press ■ one more time after stopping playback, then press ▷.
- Resume Play may not be available on some DVD discs.
- Depending on where you stopped the disc, the console may resume play from a slightly different point.
- The recording of the point where playback was stopped is cleared when:
 - you open the disc tray
 - you shift to standby mode by pressing and holding down the ⏻ (standby)/RESET button
 - you turn the power off using the MAIN POWER switch on the console rear
 - you start playback after selecting a title or chapter.

Viewing a DVD video (continued)

● Playback in desired order (Program Play)

You can set the DVD to play scenes in any order you like by arranging the order of titles or chapters on this screen. This function can be accessed only with the DVD remote control.

- 1 Press the PROGRAM button.**
- 2 Select the item number and press the × button.**
- 3 Use the directional buttons to select the number of the title that includes the desired chapter and press the × button.**
- 4 Use the directional buttons to select the number of the desired chapter and press the × button.**
- 5 Repeat steps 3 and 4 to continue arranging the desired order of titles.**
- 6 Press the ▷ PLAY button.**

Program Play begins.

To end Program Play

Press the CLEAR button.

To change Program Play settings

- 1 In step 2, select the number of the item to be changed and press the × button.**

Settings can be changed while Program Play is in use. Please note, however, that the item currently in play cannot be changed.

- 2 Repeat steps 3 and 4 above to enter new settings.**

To clear Program Play settings

To cancel all settings, select “Clear all” in step 2 at the top of this page. To cancel settings one-by-one, stop play and use the directional buttons in step 3 to select the item to be cleared. Press the × button, select “Clear” and press the × button again to remove the item.

Using Program Play again after playback has finished

The same programmed sequence can be viewed again by pressing the ▷ PLAY button.

Repeat Play and Shuffle Play can be selected during Program Play

During Program Play, press the REPEAT or SHUFFLE button. For more details, see “Playback in random order (Shuffle Play)” on page 18, or “Repeated playback (Repeat Play)” on page 19.

Notes

- Program Play is not available on some DVD discs.
- Only the numbers of titles and chapters recorded on the disc are displayed.
- Program Play settings are cleared when:
 - you open the disc tray
 - you reset the console by pressing the ⏻ (standby)/RESET button
 - you shift to standby mode by pressing and holding down the ⏻ /RESET button
 - you turn the power off using the MAIN POWER switch on the console rear.
- By setting Program Play, A \leftrightarrow B Repeat is cancelled.

Viewing a DVD video (continued)

● Playback in random order (Shuffle Play)

Playback of the DVD is done in a random order with no relation to the original title and chapter numbers. This function can be accessed only with the DVD remote control.

Press the SHUFFLE button.

With each press of the button, the display cycles among “Title Shuffle,” “Chapter Shuffle,” and “Shuffle Off.”

To end Shuffle Play

Select “Shuffle Off” or press the CLEAR button.

Shuffle Play can be set even when the disc is not playing.

Press the SHUFFLE button and choose the desired setting. Then press the ▷ PLAY button to begin playback in Shuffle Play mode.

Program Play or Repeat Play functions can be selected during Shuffle Play.

During Shuffle Play, press the PROGRAM or REPEAT button. For more details, see “Playback in desired order (Program Play)” on page 16, or “Repeated playback (Repeat Play)” on page 19.

Notes

- Shuffle Play may not be available on some DVD discs.
- Shuffle Play is cleared when:
 - you display the DVD menu or Title menu
 - you open the disc tray
 - you turn the power off using the MAIN POWER switch on the console rear.
- By setting Shuffle Play, A↔B Repeat is cancelled.
- When “Chapter Shuffle” is selected, up to 200 chapters on the disc are played back in random order.

● **Repeated playback (Repeat Play)**

All of the titles on the DVD, or one title or chapter can be repeatedly played back with Repeat Play. When used in combination with Shuffle or Program Play, this function will repeat the Program or Shuffle Play order. This function can be accessed only with the DVD remote control.

Press the REPEAT button.

With each press of the button, the display cycles among “Disc Repeat,” “Title Repeat,” “Chapter Repeat,” and “Repeat Off.”

To end Repeat Play

Select “Repeat Off” or press the CLEAR button.

Repeat Play can be set even when the disc is not playing.

Press the REPEAT button and choose the desired setting. Then press the ▷ PLAY button to begin playback in Repeat Play mode.

Program Play or Shuffle Play can be selected during Repeat Play.

During Repeat Play, press the PROGRAM or SHUFFLE button. For more details, see “Playback in desired order (Program Play)” on page 16, or “Playback in random order (Shuffle Play)” on page 18.

Notes

- Repeat Play may not be available on some DVD discs.
- Repeat Play is cleared when:
 - you open the disc tray
 - you turn the power off using the MAIN POWER switch on the console rear.
- By setting Repeat Play, A↔B Repeat is cancelled.

Viewing a DVD video (continued)

● Repeated playback of a selected section (A↔B Repeat)

During playback, you can set a specific section of the disc for repeated playback. This is convenient for language studies, learning a new song, and many other situations. This function can be accessed only with the DVD remote control.

- 1 Press the A↔B button at the starting point (point A) of the section for repeated playback.**
The starting point is set.
- 2 Press the A↔B button again at the ending point (point B) of the section for repeated playback.**
The selected section begins repeated playback.

To cancel A↔B Repeat

Press the CLEAR button.

Notes

- A↔B Repeat may not be available on some sections of some DVD discs.
- Only one section can be selected for A↔B Repeat at a time.
- A↔B Repeat is cleared when:
 - you press the ■ button twice
 - you display the DVD menu or Title menu
 - you open the disc tray
 - you turn the power off using the MAIN POWER switch on the console rear.
- Setting A↔B Repeat cancels Shuffle Play, Repeat Play and Program Play.

Using the Control Panel

The DVD remote control allows you to use various functions with the Control Panel. When using the DVD remote control, some additional functions can be accessed compared to those available when using the Analog Controller (DUALSHOCK®2). These additional features are described in pages 22 to 24.

Regarding those functions of the Control Panel that can be accessed both by the DVD remote control and the Analog Controller (DUALSHOCK®2), these are described in the PlayStation®2 console instruction manual. The functions are:

GB

- Using the DVD menu
- Using the Title menu
- Changing the audio language
- Changing the viewing angles
- Displaying subtitles
- Displaying the list of the direct buttons

Refer to “Using various functions with the Control Panel” in the PlayStation®2 console instruction manual for details.

Using the Control Panel (continued)

● **Selecting a specific scene for playback**

When the IR receiver unit is connected to the console, you can search for a scene to be played back by specifying the title number, chapter number and elapsed time.

- 1 While playing a disc, select the  (Go to Title) icon using the directional buttons and press the X button.**
- 2 Select the appropriate item using the directional buttons and press the X button.**
 - Title = Specify the title number.
 - Chapter = Specify the chapter number.
 - C -:-:- (or T -:-:-) = Specify the elapsed time for chapter (or title).
- 3 Input numbers for the fields listed above using the number buttons of the DVD remote control.**

Playback of the selected scene is started.

When the IR receiver unit is not connected to the console

You can specify only the title number.

- 1 While playing a disc, select the  (Go to Title) icon using the directional buttons and press the X button.**
- 2 Select the number of the title to be played back using the directional buttons.**

In some cases, you can specify the chapter number using the number buttons of the Control Panel.

Note

You cannot select a scene by specifying the remaining time of the chapter or title (only elapsed time can be used).

● **Displaying title and chapter numbers**

While playing or pausing a disc, select the  (Chapter Display) icon using the directional buttons and press the X button.

The display is turned on or off each time you press the X button.

To display the elapsed time and remaining time

Press the TIME button on the DVD remote control several times. Each time you press this button, the display beside the title number and chapter number changes as follows:

Elapsed time of the current chapter → Remaining time of the current chapter → Elapsed time of the current title → Remaining time of the current title → Display off → Title and chapter number → Elapsed time of the current chapter → ...

C - : - : - = Elapsed time of the current chapter.

C - - : - : - = Remaining time of the current chapter.

T - : - : - = Elapsed time of the current title.

T - - : - : - = Remaining time of the current title.

When the IR receiver unit is not connected

You can display only the current title and chapter numbers.

Using the Control Panel (continued)

● Finding a particular point on a disc (Search)

While playing a disc, you can locate a particular point on the disc quickly by using Search forward or Search backward.

Note

The Search function is not available on some DVD discs.

To search for a point using Search forward or Search backward

- 1 While playing a disc, select the  (Search forward) or the  (Search backward) icon using the directional buttons and press and hold down the **X** button.**
- 2 When you find the desired point, release the **X** button.**

You can search for a point directly

Press the  or  SCAN button of the DVD remote control and watch until you find the point you are looking for. When you find the desired point, press the  PLAY button.

Each time you press the  or  SCAN button, the search speed changes (three speeds).

To search by slow-motion play

- 1 While playing a disc, select the  (Slow) icon using the directional buttons and press the **X** button.**
Slow-motion play is started.
- 2 When you find the desired point, select the  (Play) icon and press the **X** button.**
Normal speed play is resumed.

You can choose slow-motion play directly

Press the  or  SLOW button on the DVD remote control and watch until you find the point you are looking for. When you find the desired point, press the  PLAY button.

Troubleshooting

Please go through this section if you experience difficulty in operating the DVD remote control.

If you experience any of the following difficulties, use this troubleshooting guide to help remedy the problem before requesting repair. Use the troubleshooting guide in the PlayStation®2 console instruction manual together with this troubleshooting guide.

Should any problem persist, contact the appropriate PlayStation® customer service number in each country/ area.

GB

Operation

DVD remote control doesn't work.

- ➔ There is an obstacle between the DVD remote control and the PlayStation®2 console.
- ➔ The distance between the DVD remote control and the console is too long.
- ➔ You are not pointing the DVD remote control toward the IR receiver on the IR receiver unit connected to the PlayStation®2 console.
- ➔ The batteries in the DVD remote control have run out.
- ➔ You are using the DVD remote control for another appliance.
- ➔ The IR receiver unit is not connected properly to the controller port of the console.
- ➔ The IR receiver on the IR receiver unit is exposed to strong light such as direct sunlight or the light from a lamp.
- ➔ You are playing PlayStation®2 or PlayStation® format software. Some PlayStation®2 and PlayStation® format software will not function properly when operated using the buttons on the DVD remote control. Also, the DVD remote control will not work if you push more than one button at a time.

Troubleshooting (continued)

Picture quality

When you play a DVD video, picture noise appears.

➔ The settings are not correct.

When using the component AV cable (for PlayStation®2), you must set the “Component Video Out” option of the console System Configuration menu to “Y Cb/Pb Cr/Pr.” For details, refer to the PlayStation®2 console instruction manual.

DVD video operation

Disc playback does not start from the beginning of the DVD.

➔ Program Play, Shuffle Play, Repeat Play or A↔B Repeat is set.

Refer to the instructions on pages 16-20 of this manual for the method of clearing each of these special playback modes.

Specifications

- Power supply : 3V DC (size AAA battery × 2)
- Dimensions : Approx. 59 × 159 × 17mm (width × height × depth)
- Weight : Approx. 72g (not including batteries)
- Accessories : Refer to page 4.
- Battery life : About 6 months under normal operating conditions.
When the batteries run down, the DVD remote control will not operate normally or the operating distance will become shorter than usual.
When this happens, replace both batteries with new ones.

GB

Design and specifications are subject to change without notice.

注意事項

本產品乃基於最高的安全考量而設計並精密製造的。為避免本產品因錯誤的使用方法而發生任何功能異常，以及防止觸電、火災或人員傷亡，請遵守下列事項。

- 如果出現異常無法正確操作，請立即停止使用本產品。
- 請把 PlayStation®2 專用紅外線接收系統放在兒童拿不到的地方。將 PlayStation®2 專用紅外線接收系統吞入口中可能會導致窒息。假如發生這類問題時，請立即接受醫生的治療。
- 切勿分解或改造 DVD 遙控器、紅外線接收系統。
- 不可放置在潮濕、灰塵極多，或任何有油煙或蒸氣的地方。
- 不可放置在地板上。
- 請勿讓任何液體或異物掉落到 DVD 遙控器或紅外線接收系統內。
- 請注意相關的環保規定，適當地丟棄本機或其他捆包材料。
- 如果出現異常無法正確動作，請就近與保證書上記載的消費者服務中心聯繫。

目錄

注意事項	2
------------	---

安裝 4

安裝前	4
使用前須知事項	4
PlayStation®2 專用 DVD 遙控器	
電池的安裝	5
連接 PlayStation®2 專用	
紅外線接收系統	6

播放 DVD 7

播放 DVD	7
停止播放	8
操作 DVD 播放系統	8
使用控制介面	9
使用 PlayStation®2	
專用 DVD 遙控器	13
從停播點恢復播放	
（記憶放影）	15
自己編排播放順序	
（預約播放）	16
不按曲目順序的任意播放	
（隨機播放）	18
重複播放	19
重複播放指定部分	
（A←→B 片段播放）	20

使用控制介面進行各種操作 21

尋找標題/章節/時間	22
顯示光碟的播放資訊	23
發現光碟的特殊場景（尋找）	24

故障檢修 25 **CT**

規格 27

安裝

● 安裝前

請檢查和確認是否具備以下部件：

- PlayStation®2 專用 DVD 遙控器 1 台
- PlayStation®2 專用紅外線接收系統 1 個
- 4 號乾電池 2 顆
- 使用說明書 1 本


如果欠缺任何部件，請就近與保證書上記載的消費者服務中心聯繫。

● 使用前須知事項

- 某些 PlayStation®2 或 PlayStation® 規格之軟件會因為通過 DVD 遙控器的操作，而出現無法配合操作而完全起動各項機能之現象。
- 同時按兩顆以上的按鈕會導致 DVD 遙控器無法正常運作。
- 請注意您無法同時使用兩台以上的 DVD 遙控器或紅外線接收系統。
- 請勿將 DVD 遙控器或紅外線接收系統放在高溫、濕氣重或易受陽光直接照射的地方。（操作溫度：5°C - 35°C）
- 請勿在 DVD 遙控器或紅外線接收系統上放置重物。
- 請勿投擲或掉落 DVD 遙控器、紅外線接收系統，並切勿意圖對 DVD 遙控器、紅外線接收系統賦予不當的物理性震動。
- 請勿觸摸或將其他外部零件插入紅外線接收系統的金屬內部。
- 請使用乾淨軟布擦拭 DVD 遙控器、紅外線接收系統，請勿使用輕油精等稀釋溶劑或其他化學物品。
- DVD 選單及設定畫面等靜止畫面假如長時間顯示在電視機上，有可能發生影像出現模糊的殘像問題。特別是液晶方式以外的螢幕投影電視相當容易發生上述問題，因此規勸您最好避免使用該類電視機。
- 使用 2.00 以前版本的 PlayStation®2 專用 DVD 播放系統觀賞 DVD（數碼影音光碟）時，「PlayStation®2 專用 DVD 遙控器」的部分機能可能無法正常運作。您可進入主選單，並按 Δ 按鈕開啓「Version Information（版本資訊）」畫面後，確認「DVD Player（DVD 播放系統）」的目前版本。詳細請參閱 PlayStation®2 主機的使用說明書。

● PlayStation®2 專用 DVD 遙控器 電池的安裝

如圖所示，對準（+）和（-）極，把兩顆 4 號乾電池（附屬品）裝入 DVD 遙控器。

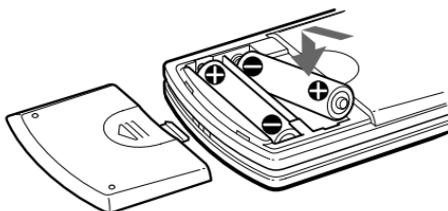

CT


注意事項：

- 電池的不正確使用會導致電池液的洩漏或爆炸，當使用電池時，請遵守以下事項：
 - 須確認放入時電池（+）、（-）極和遙控器中的標誌一致。
 - 不可以混合使用新舊或不同型式的電池。
 - 不可以嘗試對非充電式電池充電。
 - 長時間不使用 PlayStation®2 專用 DVD 遙控器（以下簡稱遙控器）時，請取出電池。
 - 當有電池液洩漏時，請將洩漏到遙控器內部的電池液擦拭乾淨後，再放入新電池。
- 當使用 DVD 遙控器時，請注意不要讓 PlayStation®2 專用紅外線接收系統的感覺器部分受到陽光或照明器具引起的強烈光線的直接照射，否則可能會導致無法正確操作的問題。

安裝（續上頁）

● 連接 PlayStation®2 專用 紅外線接收系統

請箭頭朝上，將 PlayStation®2 專用紅外線接收系統（以下簡稱紅外線接收系統）的连接端子牢靠地插入 PlayStation®2 主機的控制器端子。

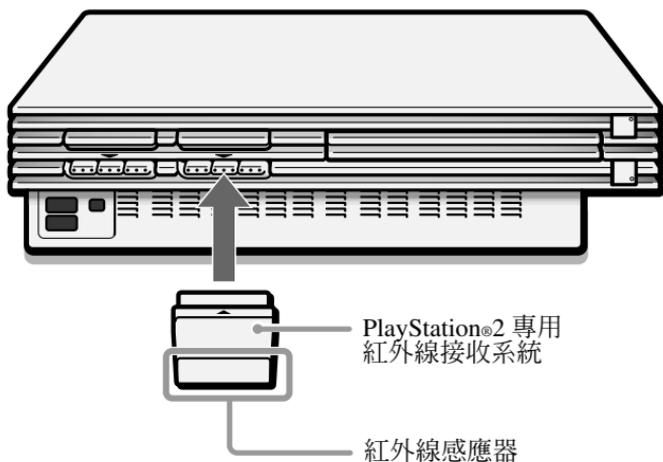

注意事項：

當第一次使用紅外線接收系統，插入 PlayStation®2 主機前，一定要拿掉防刮保護膠膜。

播放 DVD

● 播放 DVD

- 1 按 PlayStation®2 主機後面的 **MAIN POWER**（主電源）按鈕，接通電源。
- 2 按 （預備）/**RESET**（再啟動）按鈕。
- 3 按 （打開）按鈕。
- 4 使標籤之面朝上（想播放之面朝下），將光碟放入托盤。
- 5 按 （打開）按鈕。
關閉托盤，開始播放。

注意事項：

- 某些 DVD 在開始播放時，首先會顯示 DVD 選單或標題選單。
- 在播放後按  按鈕，螢幕上會顯示「Browser（瀏覽）」介面。
- 在播放中關閉電源的話，將無法保存變更過的設定內容。

播放 DVD (續上頁)

播放 DVD 的 DTS 音源時

必須透過「數碼輸出光纖」，才能傳送 DTS 聲音信號。連接普通的聲音連接線時無法傳送該信號。

- 如果並未連接內建 DTS 解碼器的音響設備，請勿將「Audio Setup (設定聲音)」選單的「Audio Digital Out (數碼聲音輸出)」項目之「D T S」設定為「O n (開)」。假如您選擇錯誤，在播放支援「D T S」的光碟時，喇叭會發出刺耳的劇烈雜音(或發不出聲音)，更可能會損壞到您的耳朵及喇叭。
- 將「Audio Setup (設定聲音)」選單的「Audio Digital Out (數碼聲音輸出)」項目之「D T S」設定為「O f f (關)」後，那麼即使使用數碼輸出光纖，亦無法播放 DVD 中的 DTS 聲音信號。

● 停止播放

- 1 按 PlayStation®2 主機的  (打開) 按鈕，打開光碟托盤。
- 2 取出光碟。
- 3 按  (打開) 按鈕，關閉托盤。
- 4 /RESET (再啟動) 按鈕按住兩秒鐘左右。

注意事項：改變 DVD 設定後

在您取出光碟後，變更後的設定內容會自動被保存在 PlayStation®2 主機內。若是在取出光碟前按下 /RESET (再啟動) 按鈕，或關閉電源的話，則無法保存變更後的設定內容。

● 操作 DVD 播放系統

您可使用 PlayStation®2 專用 DVD 遙控器(以下簡稱遙控器)及類比控制器(DUALSHOCK®2)的按鈕、或是利用畫面上的控制介面直接操作 DVD 播放系統。操作方法的詳細說明，請參閱 PlayStation®2 主機之使用說明書「播放 DVD」的說明。

注意事項

- 某些 DVD 會因為製作上的限制，而出現操作異常或無法操作的問題。詳細請參閱光碟的使用說明。
- 部分功能會因為紅外線接收系統是否插在 PlayStation®2 主機上而異。

● 使用控制介面


您可使用控制介面搜尋特定場景、自己編排播放順序，或變更取景角度。但播放功能可能因光碟而有所不同。

控制介面上各項播放功能的詳細說明，請參閱 PlayStation®2 主機之使用說明書。

可直接選擇的項目

利用遙控器的按鈕，可直接起動播放系統的數種功能。此時畫面只會顯示使用者所選擇的項目。詳細請參考第 13 頁「使用 PlayStation®2 專用 DVD 遙控器」的說明。

CT

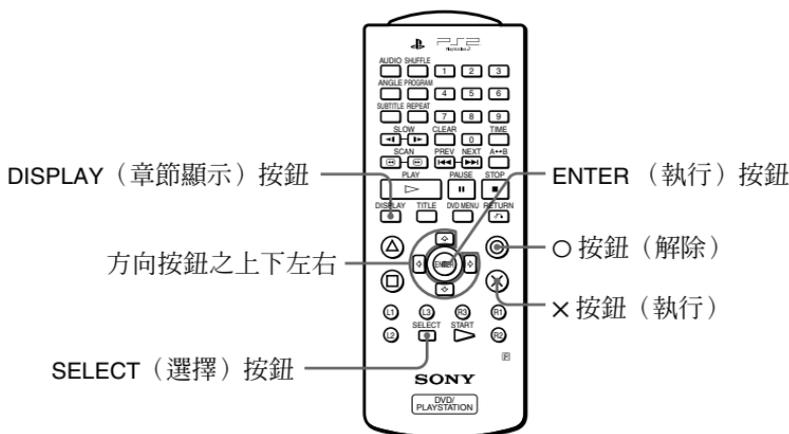

播放 DVD (續上頁)

- 1 按遙控器的 **DISPLAY** (章節顯示) 按鈕或 **SELECT** (選擇) 按鈕。螢幕上顯示控制介面。



- 2 用方向按鈕選擇功能。
- 3 按 **X** (執行) 按鈕。

注意事項

遙控器的 **X** 按鈕及 **ENTER** (執行) 按鈕都具備執行機能。但本說明書通常僅使用 **X** 按鈕進行各項說明。




- 1  **DVD 選單**
顯示 DVD 選單。
- 2  **標題選單**
顯示標題選單。
- 3  **Return (返回)**
返回 DVD 選單或標題選單的前一個畫面。
- 4  **聲音選項**
選擇 DVD 的播放語言。
- 5  **取景角度選項**
改變 DVD 的播放角度。
- 6  **字幕選項**
選擇 DVD 的播放字幕。
- 7  **進入標題**
用數字按鈕選擇標題碼、章節碼或時間後，直接進入指定的標題或章節。

播放 DVD (續上頁)

- 8  **設定**
使用設定選單，您可選擇恢復初期設定、調節畫質和聲音，並設定各種輸出等。您也可設定 DVD 播放時的字幕語言及選單的使用語言、限制兒童播放（視聽者年齡限制）等。
- 9  **章節顯示**
播放光碟時，要求螢幕上顯示目前的標題碼、章節碼。
- 10  **小幫手**
螢幕上會顯示類比控制器（DUALSHOCK®2）按鈕的各項功能。
- 11 **進入章節/輸入號碼**
指定播放的章節碼或輸入號碼。
- 12  **倒回**
倒回播放中章節的開頭或上一個章節的開頭。
- 13  **倒轉尋找/快轉尋找**
在播放中掃描影像，特定場景。
- 14  **快進**
進到播放中的下一個章節的開頭。
- 15  **播放**
選擇播放。
- 16  **暫停**
暫時停止播放。
- 17  **停止**
停止播放 DVD。
- 18  **慢動作播放**
在播放中慢動作觀賞影像。

● 使用 PlayStation®2 專用 DVD 遙控器

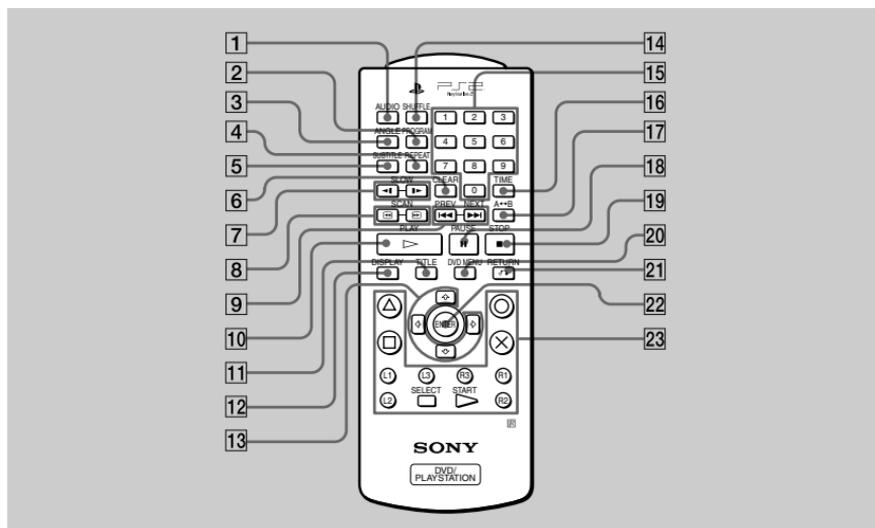

- 1 AUDIO (聲音語言) 按鈕**
選擇 DVD 的播放語言。
- 2 PROGRAM (預約播放) 按鈕**
選擇“預約播放”。
- 3 ANGLE (取景角度) 按鈕**
改變 DVD 的播放角度。
- 4 REPEAT (重復播放) 按鈕**
選擇“重復播放”。
- 5 SUBTITLE (字幕) 按鈕**
選擇 DVD 的播放字幕。
- 6 CLEAR (解除) 按鈕**
解除所選的數字或播放模式。
- 7 <SLOW> SLOW (慢動作播放) 按鈕**
在播放中慢動作觀賞影像。
- 8 <SCAN> SCAN (倒轉尋找/快轉尋找) 按鈕**
在播放中掃描影像，特定場景。


播放 DVD (續上頁)

- 9 **◀◀/▶▶ PREV/NEXT (倒回/快進) 按鈕**
倒回播放中章節的開頭或進到下一個章節的開頭。
- 10 **▷ PLAY (播放) 按鈕**
選擇播放。
- 11 **TITLE (標題) 按鈕**
顯示標題選單。
- 12 **DISPLAY (章節顯示) 按鈕**
顯示控制介面。
- 13 **方向按鈕**
由螢幕上選擇項目。
- 14 **SHUFFLE (隨機播放) 按鈕**
選擇“隨機播放”。
- 15 **數字按鈕**
指定數字，選擇螢幕上顯示的項目。
- 16 **TIME (顯示時間) 按鈕**
顯示播放時間等資訊。
- 17 **A↔B (A↔B 片段播放) 按鈕**
選擇指定部分的重複播放。
- 18 **II PAUSE (暫停) 按鈕**
暫時停止播放。
- 19 **■ STOP (停止) 按鈕**
停止播放 DVD。
- 20 **DVD MENU (DVD 選單) 按鈕**
顯示 DVD 選單。
- 21 **↶ RETURN (返回) 按鈕**
返回 DVD 選單或標題選單的前一個畫面。
- 22 **ENTER (執行) 按鈕**
執行在螢幕上所選擇的項目。
- 23 **類比控制器 (DUALSHOCK®2) 上相同名稱之按鈕的操作方法與上面相同。**

● 從停播點恢復播放（記憶放影）

- 1 在播放光碟時，按遙控器的 ■（停止）按鈕或 ○ 按鈕停止播放。電視機螢幕會出現「Press [Play] to resume viewing. To start from the beginning, press [Stop] and then [Play]. 《按 Play（播放）按鈕將會從停播點起繼續播放。要從頭開始播放時，請按 Stop（停止）按鈕後再選擇 Play（播放）按鈕》」的字樣。
- 2 按遙控器的 ▷（播放）按鈕。
從步驟 1 的停播點起繼續播放。

使用控制介面時

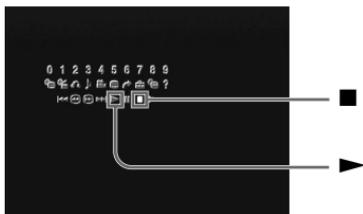

- 1 播放光碟時，用方向按鈕之上下左右選擇操作介面的 ■（停止）後，按 × 按鈕停止播放。
- 2 選擇 ►（播放）後，按 × 按鈕。
從步驟 1 的停播點起繼續播放。

注意事項

- 若要從頭重新播放，請在停止播放後，按 ■（停止）按鈕解除設定，再按 ▷（播放）按鈕。
- 某些 DVD 可能不支援記憶放影功能。
- 由於停止設定上的問題，實際繼續播放的位置可能會跟停播點有所出入。
- 出現下列情形時，將自動解除記憶放影：
 - 打開光碟托盤。
 - 按主機前面的 ⏻（預備）/RESET（再啟動）按鈕。
 - 按主機後面的 MAIN POWER（主電源）按鈕，關閉電源。
 - 選擇標題或章節後開始播放。

播放 DVD（續上頁）

● 自己編排播放順序（預約播放）

依自己喜好編排標題及章節之播放順序後，命令主機按照所指定的順序播放光碟。本功能只能使用遙控器操作。

- 1 按 **PROGRAM**（預約播放）按鈕。
- 2 選擇項目號碼，按 **×** 按鈕。
- 3 用方向按鈕之上下按鈕選擇內含章節碼的標題碼，按 **×** 按鈕。
- 4 用方向按鈕之上下按鈕選擇要播放的章節碼，按 **×** 按鈕設定。
- 5 反覆步驟 3、4，選擇其他要播放的標題。
- 6 按 **▷**（播放）按鈕。
開始預約播放。

若要停止預約播放

按 **CLEAR**（解除）按鈕。

若要改變播放順序

- 1 在步驟 2，選擇要變更的項目號碼，按 **×** 按鈕。
雖然您可在執行預約播放時，修改播放順序的設定。但無法變更目前播放中的項目。
- 2 反覆 3、4 步驟，重新輸入播放順序。

若要取消播放順序

要取消所有播放順序時，請在本頁的步驟 2 時，選擇「Clear all（全部解除）」。要一個個地取消播放順序時，在停止中、步驟 3 時，用方向按鈕之上下選擇要解除的項目，按 **×** 按鈕進入，選擇「Clear（解除）」後再按 **×** 按鈕完成設定。

即使預約播放已經結束，播放順序依舊存在

按 **▷**（播放）按鈕，可再次進行相同的預約播放。

可對所設定的預約播放進行“重複播放”或“隨機播放”

在執行預約播放時，按遙控器的 REPEAT（重複播放）按鈕或 SHUFFLE（隨機播放）按鈕。詳細請參考第 18 頁「不按曲目順序的任意播放（隨機播放）」及第 19 頁「重複播放」的說明。

注意事項

- 某些 DVD 可能不支援預約播放功能。
- 畫面上僅會顯示被記錄在光碟中的標題及章節碼。
- 出現下列情形時，將自動解除預約播放：
 - 打開光碟托盤。
 - 按 \odot （預備）/RESET（再啓動）按鈕，再啓動 PlayStation®2 時。
 - 按 \odot /RESET（再啓動）按鈕，令 PlayStation®2 回到預備狀態。
 - 按 PlayStation®2 主機後面的 MAIN POWER（主電源）按鈕，關閉電源。
- 設定預約播放後，將自動解除“A \longleftrightarrow B 片段播放”

播放 DVD（續上頁）

● 不按曲目順序的任意播放（隨機播放）

以自動任意設定的隨機順序進行播放。本功能只能使用遙控器操作。

按 SHUFFLE（隨機播放）按鈕

每按一次按鈕，都會依「Title Shuffle（標題隨機播放）」、「Chapter Shuffle（章節隨機播放）」、「Shuffle Off（解除隨機播放）」的順序“打亂”播放順序。

若要停止隨機播放

選擇「Shuffle Off（解除隨機播放）」或按 CLEAR（解除）按鈕。

可在停止播放時設定隨機播放

按 SHUFFLE（隨機播放）按鈕選擇想要的設定後，按 ▷（播放）按鈕開始隨機播放。

可在執行隨機播放時選擇“預約播放”或“重複播放”

在執行隨機播放時，按遙控器的 PROGRAM（預約播放）按鈕或 REPEAT（重複播放）按鈕。詳細請參考第 16 頁「自己編排播放順序（預約播放）」及第 19 頁「重複播放」的說明。

注意事項

- 某些 DVD 可能不支援隨機播放功能。
- 出現下列情形時，將自動解除隨機播放：
 - 螢幕上顯示 DVD 選單或標題選單。
 - 打開光碟托盤。
 - 按 PlayStation®2 主機後面的 MAIN POWER（主電源）按鈕，關閉電源。
- 設定隨機播放後，將自動解除“A←→B 片段播放”
- 選擇「Chapter Shuffle（章節隨機播放）」時，最多可隨機播放被記錄在光碟中的 200 個章節。

● 重複播放

重複播放所有標題或某個標題、章節。配合隨機播放和預約播放，可依隨機播放或預約播放的播放順序進行重複播放。

本功能只能使用遙控器操作。

按 REPEAT（重複播放）按鈕

每按一次按鈕，都會依「Disc Repeat（完全重複播放）」、「Title Repeat（標題重複播放）」、「Repeat Off（解除重複播放）」的順序改變重複播放的內容。

若要停止重複播放

選擇「Repeat Off（解除重複播放）」或按 CLEAR（解除）按鈕。

可在停止播放時設定重複播放

按 REPEAT（重複播放）按鈕選擇想要的設定後，按 ▷（播放）按鈕開始重複播放。

可在執行重複播放時選擇“預約播放”或“隨機播放”

在執行重複播放時，按遙控器的 PROGRAM（預約播放）按鈕或 SHUFFLE（隨機播放）按鈕。詳細請參考第 16 頁「自己編排播放順序（預約播放）」及第 18 頁「不按曲目順序的任意播放（隨機播放）」的說明。

注意事項

- 某些 DVD 可能不支援重複播放功能。
- 出現下列情形時，將自動解除重複播放：
 - 打開光碟托盤。
 - 按 PlayStation®2 主機後面的 MAIN POWER（主電源）按鈕，關閉電源。
- 設定隨機播放後，將自動解除“A↔B 片段播放”

播放 DVD (續上頁)

● 重複播放指定部分 (A↔B 片段播放)

在播放光碟時，指定某個特定部分進行重複播放。本功能有助於您學習語言或記憶歌詞。本功能只能使用遙控器操作。

- 1 在播放中，選擇要重複播放部分的起點 (A 點)，按 A↔B (A↔B 片段播放) 按鈕。
設定起點 (A 點)。
- 2 選擇要重複播放部分的終點 (B 點)，按 A↔B (A↔B 片段播放) 按鈕。
開始指定部分的重複播放。

若要停止 A↔B 片段播放

按 CLEAR (解除) 按鈕。

注意事項

- 某些 DVD 的場面可能不支援 A↔B 片段播放功能。
- 只能設定一個 A↔B 片段播放。
- 出現下列情形時，將自動解除 A↔B 片段播放：
 - 按兩次 ■ (停止) 按鈕或 × 按鈕。
 - 螢幕上顯示 DVD 選單或標題選單。
 - 打開光碟托盤。
 - 按 PlayStation®2 主機後面的 MAIN POWER (主電源) 按鈕，關閉電源。
- 設定 A↔B 片段播放後，將自動解除“隨機播放”、“重複播放”、“預約播放”。

使用控制介面進行各種操作

您可透過遙控器或類比控制器（DUALSHOCK®2）使用控制介面進行各種操作。但本說明書僅介紹使用遙控器時的操作方法，詳細請參考第 22 頁至第 24 頁的說明。

使用遙控器或類比控制器（DUALSHOCK®2）可進行以下操作：

- 使用 DVD 選單
- 使用標題選單
- 選擇 DVD 的播放語言
- 改變 DVD 的播放角度
- 顯示或隱藏字幕
- 顯示類比控制器（DUALSHOCK®2）按鈕的各項功能。

詳細請參閱 PlayStation®2 主機之使用說明書「使用控制介面」的說明。

使用控制介面進行各種操作（續上頁）

● 尋找標題/章節/時間

將紅外線接收系統插入 PlayStation®2 主機後，可在輸入標題碼、章節碼或時間後，直接跳到指定的地方開始播放。

- 1 在播放中，用方向按鈕之上下左右選擇 （進入標題）後，按 × 按鈕決定。
- 2 用方向按鈕之左右選擇指定的項目後，按 × 按鈕。
 - Title = 指定標題碼。
 - Chapter = 指定章節碼。
 - C —:—:—（或 T —:—:—）= 指定章節（或標題）的經過時間。
- 3 用遙控器的數字按鈕選擇指定數字。
從指定的地方開始播放。

當紅外線接收系統並沒有插在 PlayStation®2 主機上時
只可指定標題碼。

- 1 播放光碟時，用方向按鈕選擇 （進入標題），按 × 按鈕決定。
- 2 用方向按鈕，選擇指定的標題。
部分 DVD 可以利用控制介面上的數字按鈕，指定標題。

注意事項

您無法指定章節或標題的剩餘時間來選擇播放。

● 顯示光碟的播放資訊

播放光碟或停止播放時，用方向按鈕之上下左右選擇  (章節顯示) 後，按 × 按鈕決定。

您可隨時利用 × 按鈕，要求顯示或隱藏播放資訊。

顯示已播放時間及剩餘時間

按遙控器的 TIME (顯示時間) 按鈕，可改變顯示方式。每按一次按鈕，播放中的標題碼及章節碼的時間顯示方式都將如下改變：

播放中章節的已播放時間→播放中章節的剩餘時間→播放中標題的已播放時間→播放中標題的剩餘時間→隱藏播放資訊→標題碼及章節碼→播放中章節的已播放時間→.....

C — : — : — = 播放中章節的已播放時間

C — — : — : — = 播放中章節的剩餘時間

T — : — : — = 播放中標題的已播放時間

T — — : — : — = 播放中標題的剩餘時間

當紅外線接收系統並沒有插在 PlayStation®2 主機上時
只會顯示目前的標題碼及章節碼。

使用控制介面進行各種操作（續上頁）

● 發現光碟的特殊場景（尋找）

在播放中，透過快轉尋找或倒轉尋找，掃描影像特定場景。

注意事項

某些 DVD 禁止本項操作。

快速特定場景（快轉尋找或倒轉尋找）

- 1 在播放中，用方向按鈕之上下左右選擇 （快轉尋找）或 （倒轉尋找），然後按住  按鈕不放。
- 2 發現想要播放的場景後，放開  按鈕。

可直接尋找特定場景

按遙控器的 （快轉尋找）/（倒轉尋找）按鈕，當發現想要播放的場景後，按 （播放）按鈕恢復普通播放。

每按一次  / （快轉尋找）/（倒轉尋找）按鈕，都可改變掃描速度的快慢（分為 3 階段）。

慢動作特定場景（慢動作尋找）

- 1 在播放中，用方向按鈕之上下左右選擇 （慢動作播放），然後按  按鈕執行。
開始慢動作播放。
- 2 當發現想要播放的場景後，選擇 （播放）並按  按鈕。
回到正常速度播放。

可直接慢動作播放

按遙控器的  / （慢動作播放）按鈕，當發現想要播放的場景後，按 （播放）按鈕恢復普通播放。

故障檢修

在使用本產品時，如果操作上遭遇到困難，請先閱讀下面的文章。

當您在使用本產品遭遇到操作上的問題時，請在送去修理之前，閱讀以下的故障檢修指南，再次進行檢查。另外，請同時參閱 PlayStation®2 主機之使用說明書「故障檢修」的說明。

如果無法解決問題，請就近與保證書上記載的消費者服務中心聯繫。

CT

操作

無法操作遙控器

- ➔ 在遙控器與 PlayStation®2 主機之間有障礙物。
- ➔ 遙控器與 PlayStation®2 主機之間距離太長。
- ➔ 沒有讓遙控器對準插在 PlayStation®2 主機上的紅外線接收系統。
- ➔ 電池電力已經耗盡。
- ➔ 您使用的是其他機器的遙控器。
- ➔ 紅外線接收系統並未正確插在主機上。
- ➔ 紅外線接收系統的感應器部分正受到陽光或照明器具引起的強烈光線的直接照射。
- ➔ 正在遊玩 PlayStation®2 規格或 PlayStation® 規格之軟件。某些 PlayStation®2 或 PlayStation® 規格之軟件會造成 DVD 遙控器操作上的異常。又，同時按兩顆以上的按鈕亦會導致 DVD 遙控器無法正常運作。

故障檢修 (續上頁)

畫面

播放 DVD 時，畫面出現雜痕

→ 系統設定錯誤。

使用「PlayStation®2 專用影像色差連接線」連接電視機時，您必須將「System Configuration (系統設定)」選單的「Component Video Out (影像色差輸出)」選項設定為「Y Cb/Pb Cr/Pr」。詳細請參閱 PlayStation®2 主機之使用說明書。

DVD 光碟的操作

無法從光碟的開頭開始播放

→ 是否設定了“預約播放”、“隨機播放”、“重複播放”或“A↔B 片段播放”。詳細請參考第 16~20 頁的說明。

規格

- 電源 : DC 3V (4 號乾電池 2 顆)
- 尺寸 (大約) : 59 × 159 × 17 mm (寬 × 高 × 深)
- 重量 (大約) : 72g (不含電池)
- 附屬品 : 參考第 4 頁的說明。
- 電池壽命 : 正常操作下，一般約為 6 個月。
當電池電力接近消耗殆盡時，會出現無法正確操作遙控器，或必須靠近 PlayStation®2 主機才能動作的情形。
如出現上述情形，請更換電池。

本公司保留在無預警情況下，變更設計或規格之權利。

안전을 위하여

본 제품은 최고의 안정성을 고려하여 설계되었습니다. 그러나, 잘못 사용하면, 화재나 감전 또는 신체 상해를 유발할 수 있습니다. 안전한 사용을 위하여 다음 지침을 반드시 지켜 주십시오.

- 장치가 비정상적으로 작동할 경우 사용하지 마십시오.
- IR 수신기 (PlayStation®2 전용)는 유아의 손이 닿지 않는 곳에 보관하십시오. IR 수신기를 삼켰을 경우, 질식할 수도 있습니다.
- DVD 리모컨 또는 IR 수신기를 분해하거나 개조하지 마십시오.
- 습기와 먼지가 많은 장소와 유성연기와 직사광선에 노출되는 곳에 방치하지 마십시오.
- DVD 리모컨 또는 IR 수신기를 바닥에 두지 마십시오.
- DVD 리모컨 또는 IR 수신기에 수분이나 먼지가 들어가지 않도록 하십시오.
- 수명이 다한 제품 및 포장지 등은 적절한 방법으로 폐기하십시오.
- 기기가 정상적으로 작동되지 않을 경우, 각 해당 국가 및 지역의 PlayStation® 인포메이션 센터로 연락해 주십시오.

목차

안전을 위하여 2

준비하기 4

사용하기 전에 4

사용상 주의 4

DVD 리모컨 (PlayStation®2 전용)
에 전지 넣기 5

IR 수신기 (PlayStation®2 전용) 부
착하기 6

DVD 비디오 보기 7

DVD 비디오 재생하기 7

DVD 비디오 재생을 종료하기 8

DVD 플레이어 작동하기 8

제어판 사용하기 9

DVD 리모컨 (PlayStation®2 전용)
사용하기 13

재생 정지한 지점에서 재생하기
(연속 재생) 15

원하는 순서로 재생하기
(프로그램 재생) 16

임의 순서로 재생하기
(서플 재생) 18

반복해서 재생하기
(반복 재생) 19

선택한 부분만 반복해서 재생하기
(A↔B 반복) 20

제어판 사용하기 21

재생할 특정 장면 선택하기 22

타이틀 번호와 챕터(장) 번호
표시하기 23

디스크의 특정한 지점 찾기 24

고장이라고 생각될 때 25

사양 27

KR

준비하기

● 사용하기 전에

다음 내용물이 들어 있는지 확인하십시오.

- DVD 리모컨 (PlayStation®2 전용) (1)
- IR 수신기 (PlayStation®2 전용) (1)
- Size AAA 전지 (2)
- 사용 설명서 (1)

만약 내용물이 생략된 경우 각 해당 국가 및 지역의 PlayStation® 인포메이션 센터로 연락해 주십시오.

● 사용상 주의


- 일부 PlayStation®2 규격 소프트웨어 또는 PlayStation® 규격 소프트웨어에서는 DVD 리모컨 (PlayStation®2 전용)의 버튼조작이 정상적으로 기능하지 않을 수 있습니다.
- 복수(2개 이상)의 버튼을 한꺼번에 누를 경우 DVD 리모컨은 작동하지 않습니다.
- 2개 이상의 DVD 리모컨이나 IR 수신기를 동시에 사용할 수 없습니다.
- DVD 리모컨 혹은 IR 수신기는 고온다습하거나 직사광선이 노출되는 곳에 두지 마십시오. (5°C-35°C 범위내에서 사용해 주십시오.)
- 무거운 물체를 얹지 마십시오.
- 던지거나 떨어뜨리거나 심한 충격을 가하지 마십시오.
- IR 수신기의 단자 부분에 손을 대거나 이물질이 묻지 마십시오.
- 손질을 하실 때는 부드럽고 마른천으로 닦아 주십시오. 신나나 용해성 물질과 같은 기타 화학 약품을 사용하지 마십시오.
- DVD 메뉴, 설정표시, 혹은 “paused” (일시정지)와 같은 정지화면, 움직임이 없는 화상을 장시간 방치해 두면, TV 화면에 잔상이 계속 남아 있을 수 있습니다. 프로젝션 TV 는 다른 디스플레이보다 더욱 예민하므로 주의해 주십시오. 이러한 잔상 현상등이 발생하지 않도록 PlayStation®2 콘솔 작동에 유의해 주십시오.

- Ver 2.00 이전의 PlayStation®2 전용 DVD 플레이어로 DVD 비디오를 보실 경우, DVD 리모컨 컨트롤러의 일부 기능을 사용할 수 없습니다. DVD 플레이어의 버전은, 메인 메뉴 화면에서 △ 버튼을 눌러 “Version Information” (버전 정보)의 “DVD Player” (DVD 플레이어)를 확인해 주십시오. 상세한 사항은 PlayStation®2의 사용설명서를 참조해 주십시오.

● DVD 리모컨 (PlayStation®2 전용)에 전지 넣기

DVD 리모컨의 양극(+)과 음극(-)에 맞추어 2개의 Size AAA 전지(제공)를 넣습니다.

KR

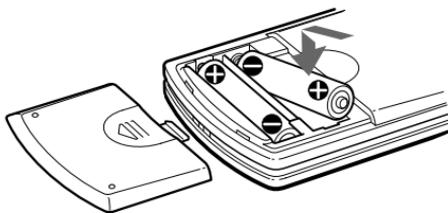


주의 사항

- 전지를 잘못 사용하면 전지액이 유출되거나 파열될 우려가 있습니다. 전지를 취급할 때에는 다음 지시 사항을 확인하십시오.
 - 전지의 양극과 음극 방향에 맞게 넣어졌는지 확인하십시오.
 - 사용한 전지와 새 전지 또는 다른 종류의 전지를 혼용하여 함께 사용하지 마십시오.
 - 충전할 수 없는 전지를 충전하려 하지 마십시오.
 - DVD 리모컨을 장시간 사용하지 않을 경우, 전지를 빼 놓으십시오.
 - 전지액이 새어 나왔을 경우, 전지를 넣는 부분에 묻어 나온 잔여분을 깨끗이 닦아 낸 후 새 전지를 넣으십시오.
- DVD 리모컨을 사용할 때 IR 수신기가 직사광선이나 조명기구로 인한 강한 빛에 노출되지 않도록 하십시오. DVD 리모컨이 제대로 작동하지 않을 수 있습니다.

준비하기(계속)

● IR 수신기 (PlayStation®2 전용) 부착하기

IR 수신기 (PlayStation®2 전용)의 커넥터를 화살표가 위로 오도록 하여, PlayStation®2 콘솔 앞면의 컨트롤러 포트에 삽입합니다.

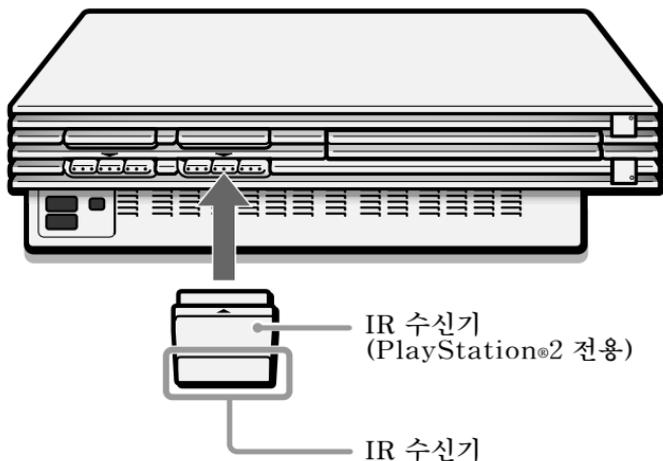

주의 사항

IR 수신기를 처음 사용할 경우, PlayStation®2 콘솔에 수신기를 부착하기 전에 긁힘 방지용 보호 필름을 제거했는지 확인하십시오.

DVD 비디오 보기

● DVD 비디오 재생하기

- 1 PlayStation®2 콘솔 뒤에 있는 MAIN POWER(주전원) 스위치를 눌러 전원을 넣습니다.
- 2 ⏻ (대기)/RESET(리셋) 버튼을 누릅니다.
- 3 스피 (열기) 버튼을 누릅니다.
- 4 디스크 트레이에 재생할 DVD 디스크를 라벨면이 위로 오게 하여 넣습니다. (데이터면 아래)
- 5 스피 버튼을 누릅니다.
디스크 트레이가 닫히고 재생이 시작됩니다.

주의 사항

- 디스크에 따라서는 즉시 재생이 시작되지 않고 타이틀 메뉴나 DVD 메뉴가 표시되는 경우가 있습니다.
- DVD 비디오 재생을 종료한 후 콘솔의 스피 버튼을 눌러 디스크를 꺼내면 브라우저 화면이 표시됩니다.
- 재생 중에 전원을 끄면, 모든 추가 설정 사항이 보존되지 않습니다.

DVD 비디오 보기(계속)

DVD 비디오의 DTS 오디오 재생 시 주의 사항

DTS 오디오 신호는 광디지털 케이블(별매)을 통해서만 출력됩니다. 일반적인 음성 케이블을 연결하였을 경우에는 출력되지 않으니 주의하시기 바랍니다.

- DTS 디코더가 내장되지 않은 오디오 기기에 연결할 경우, “Audio Setup”(음성 설정)에서 “Audio Digital Out”(디지털 음성 설정)의 “DTS” 옵션을 “On”(켜기)으로 설정하지 마십시오. 그러한 경우, “DTS” 음성 트랙을 재생하면, 스피커에서 시끄러운 잡음이 나와 청력 장애와 스피커가 손상될 수 있습니다.
- “Audio Setup”(음성 설정)에서 “Audio Digital Out”(디지털 음성 출력)의 “DTS”를 “Off”(끄기)로 설정하면, 광디지털 케이블로 연결하더라도 DVD의 DTS 음성 출력은 재생되지 않습니다.

● DVD 비디오 재생을 종료하기

- 1 PlayStation®2 콘솔의 슘(열기) 버튼을 누릅니다.
- 2 디스크를 꺼냅니다.
- 3 슘 버튼을 누릅니다.
- 4 ⏻(대기)/RESET(리셋) 버튼을 약 2초간 누릅니다.

주의 사항: DVD 설정 변경 후

변경 사항을 저장하려면 ⏻/RESET(리셋) 버튼을 누르거나 MAIN POWER(주전원) 스위치로 콘솔을 끄기 전에 DVD를 꺼냈는지 확인합니다. DVD를 꺼내지 않고 콘솔을 재설정(리셋) 하거나 전원을 끄면 변경한 사항은 보존되지 않습니다.

● DVD 플레이어 작동하기

DVD 플레이어는 다음과 같이 3가지 방법으로 조작할 수 있습니다.

- 화면상의 제어판
- DVD 리모컨
- 아날로그 컨트롤러(DUALSHOCK®2)

상세한 사항은 PlayStation®2 콘솔 사용설명서의 “DVD 비디오 재생하기”를 참조하십시오.

주의 사항

- 디스크에 따라서 조작 방법이 다르거나, 조작되지 않을 수도 있습니다.
- PlayStation®2 콘솔에 IR 수신기를 설치했는지 여부에 따라 작동 방식이 다른 기능이 있습니다.

● 제어판 사용하기


제어판은 특정 장면을 검색하거나 장면을 다른 순서로 재생하며, 앵글(각도)을 변경하거나 할 때 사용할 수 있습니다.

실제 사용할 수 있는 기능은 디스크에 따라서 다양합니다.

상세한 사항은 PlayStation®2 콘솔 사용 설명서의 “제어판 사용하기”를 참조하십시오.

항목을 직접 선택할 수도 있습니다.

DVD 리모컨 버튼으로 여러 항목을 직접 선택할 수 있습니다. 이 경우 선택된 항목만 표시됩니다. 상세한 사항은 13페이지의 “DVD 리모컨(PlayStation®2 전용) 사용하기”를 참조하십시오.

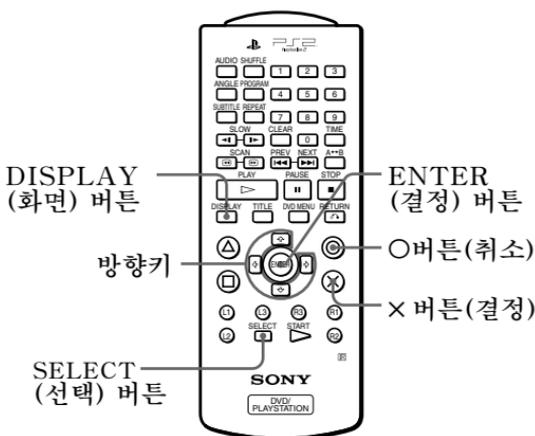



- 1** **DVD Menu(DVD 메뉴)**
DVD 메뉴를 표시합니다.
- 2** **Title Menu(타이틀 메뉴)**
타이틀 메뉴를 표시합니다.
- 3** **Return(되돌아가기)**
이전에 표시된 화면으로 되돌아갑니다.
- 4** **Audio Options(음성 옵션)**
사용 가능한 음성 언어를 표시합니다.
- 5** **Angle Options(앵글 옵션)**
사용 가능한 DVD의 앵글(각도)을 표시합니다.
- 6** **Subtitle Options(자막 옵션)**
사용 가능한 자막 언어를 표시합니다.
- 7** **Go to title(타이틀로 이동)**
숫자 버튼으로 타이틀 번호, 챕터(장) 번호, 시간을 설정하면, 설정한 타이틀이나 챕터(장)로 이동할 수 있습니다.

DVD 비디오 보기(계속)

8 Setup(설정)

설정 화면에서는 초기 설정 및 화질과 음질을 조정하여 다양한 출력 옵션을 설정할 수 있습니다. 또한, DVD를 재생할 때 자막의 언어와 시청 연령 제한등도 설정할 수 있습니다.

9 Chapter Display(챕터 표시)

재생중인 타이틀의 번호와 챕터(장) 번호를 표시합니다.

10 ? Help(도움말)

아날로그 컨트롤러(DUALSHOCK®2)의 방향키 기능이 화면에 표시됩니다.

11 챕터(장)/숫자로 바로가기 버튼

재생할 챕터(장) 번호와 선택할 수치를 지정할 때 선택합니다.

12 Previous(이전)

현재 혹은 이전의 시작 장면으로 되돌아갑니다.

13 Search(찾기)

화상을 보면서 특정한 장면을 신속하게 찾을 수 있습니다.

14 Next(다음)

다음 챕터(장)의 시작 장면으로 이동합니다.

15 Play(재생)

재생할 때 선택합니다.

16 Pause(일시정지)

재생을 일시 정지합니다.


17 Stop(정지)

DVD 재생을 정지시킵니다.

18 Slow(천천히)

화상을 보면서 장면을 천천히 재생할 때 선택합니다.

● DVD 리모컨 (PlayStation®2 전용) 사용하기

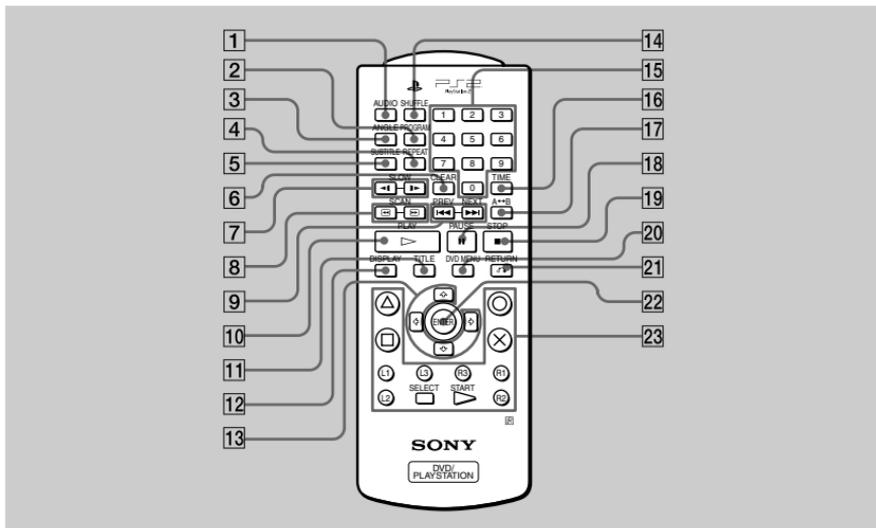

KR

- 1 **AUDIO(오디오) 버튼**
사용 가능한 음성 옵션을 표시합니다.
- 2 **PROGRAM(프로그램) 버튼**
프로그램 재생을 할 때 선택합니다.
- 3 **ANGLE(앵글) 버튼**
사용 가능한 앵글(각도)을 표시합니다.
- 4 **REPEAT(반복) 버튼**
반복 재생을 할 때 선택합니다.
- 5 **SUBTITLE(자막) 버튼**
사용 가능한 자막 옵션을 표시합니다.
- 6 **CLEAR(삭제) 버튼**
선택한 숫자와 재생 모드를 삭제할 때 누릅니다.
- 7 **◀/▶ SLOW(천천히) 버튼**
화상을 보면서 장면을 천천히 재생할 때 누릅니다.
- 8 **⏏/⏪ SCAN(스캔) 버튼**
화상을 보면서 찾고자 하는 장면으로 신속하게 이동할 수 있습니다.

DVD 비디오 보기(계속)

- 9 **◀◀/▶▶ PREV/NEXT(이전/다음) 버튼**
이전 또는 다음 챕터(장)의 시작 지점으로 이동합니다.
- 10 **▷ PLAY(재생) 버튼**
재생할 때 선택합니다.
- 11 **TITLE(타이틀) 버튼**
타이틀 메뉴를 표시합니다.
- 12 **DISPLAY(화면) 버튼**
제어판을 표시합니다.
- 13 **방향키**
화면에 표시된 항목 선택에 사용됩니다.
- 14 **SHUFFLE(셔플) 버튼**
셔플재생 (임의 순서 재생)을 할 때 선택합니다.
- 15 **Number(숫자) 버튼**
화면에 표시된 항목을 숫자로 선택할 수 있습니다.
- 16 **TIME(시간) 버튼**
재생 시간을 표시합니다.
- 17 **A↔B 버튼**
재생하고 싶은 부분만을 반복해서 재생할 때 선택합니다.
- 18 **II PAUSE(일시 정지) 버튼**
일시적으로 재생을 정지합니다.
- 19 **■ STOP(정지) 버튼**
DVD 재생을 정지합니다.
- 20 **DVD MENU(DVD 메뉴) 버튼**
DVD 메뉴를 표시합니다.
- 21 **↶ RETURN(되돌아가기) 버튼**
이전에 표시된 화면으로 되돌아갑니다.
- 22 **ENTER(결정) 버튼**
화면에서 선택된 항목을 결정합니다.
- 23 **아날로그 컨트롤러(DUALSHOCK®2)와 조작 기능이 동일합니다.**

● 재생 정지한 지점에서 재생하기(연속 재생)


1 재생중, DVD 리모컨의 ■ 버튼이나 ○ 버튼을 눌러 재생을 정지합니다.

화면에 “Press [Play] to resume viewing. To start from the beginning, press [Stop] and then [Play].” (정지한 지점에서 연속해서 재생하려면 [Play(재생)] 버튼을 누릅니다. 처음부터 재생하려면 한 번 더 [Stop(정지)]을 눌러 주십시오.) 라는 메시지가 나옵니다.

2 DVD 리모컨의 ▷ 버튼을 누릅니다.

1단계에서 재생을 정지한 지점에서 재생을 시작합니다.

제어판 사용하기

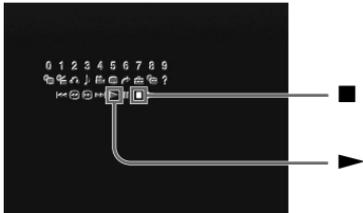

1 재생중 방향키로 제어판의 ■(정지) 아이콘을 선택하고, × 버튼을 눌러 재생을 정지합니다.

2 ▶(재생) 아이콘을 선택하고 × 버튼을 누릅니다.

1단계에서 재생을 정지한 지점에서 재생을 시작합니다.

주의 사항

- 디스크를 처음부터 재생하려면 재생을 정지한 후 ■ 버튼을 한 번 더 누른 다음 ▷ 버튼을 누릅니다.
- 일부 DVD 디스크에서는 계속 재생을 사용할 수 없는 경우가 있습니다.
- 디스크를 정지한 지점에 따라 연속 재생할 시작 지점이 밀리는 경우도 있습니다.
- 다음과 같은 경우, 재생을 정지한 지점의 기록은 지워집니다.
 - 디스크 트레이를 열 때
 - ⏻(대기)/RESET(리셋) 버튼을 눌러 스탠바이(대기) 모드로 전환했을 때
 - 콘솔 뒷면의 MAIN POWER(주전원) 스위치로 전원을 끌 때
 - 타이틀이나 챕터(장)를 선택한 후 재생을 시작할 때

DVD 비디오 보기(계속)

● 원하는 순서로 재생하기(프로그램 재생)

타이틀이나 챕터(장)를 재생하고 싶은 순서대로 골라 프로그램을 만들거나, 재생할 수 있습니다. DVD 리모컨만으로 조작할 수 있습니다.

- 1 PROGRAM(프로그램) 버튼을 누릅니다.
- 2 항목 번호를 선택하고 × 버튼을 누릅니다.
- 3 방향키로 재생하고 싶은 챕터(장) 번호를 포함한 타이틀을 선택하고, × 버튼을 누릅니다.
- 4 방향키로 재생하고 싶은 챕터(장) 번호를 선택하고, × 버튼을 누릅니다.
- 5 3, 4단계를 반복하여, 원하는 순서대로 타이틀을 설정합니다.
- 6 ▷ (재생) 버튼을 누릅니다.
프로그램 재생이 시작됩니다.

프로그램 재생을 종료하려면

CLEAR(삭제) 버튼을 누릅니다.

프로그램 재생 설정을 변경하려면

- 1 2단계에서 변경할 항목의 번호를 선택하고 × 버튼을 누릅니다.
프로그램 재생중에도 프로그램의 설정을 변경할 수 있습니다.
그러나, 재생중인 항목을 변경할 수는 없습니다.
- 2 위의 3, 4단계를 반복하여 새로운 설정을 입력합니다.

설정된 프로그램을 삭제하려면

모든 설정을 취소하려면 2단계에서 “Clear all” (전부 삭제)을 선택합니다. 설정 항목을 하나씩 취소하려면 재생을 정지하고 본문 상단의 3단계에서 방향키로 삭제할 항목을 선택합니다. × 버튼을 누르고 “Clear” (삭제)를 선택한 다음, × 버튼을 눌러 해당 항목을 삭제합니다.

재생 완료 후 다시 프로그램 재생 사용하기

▷ 버튼을 누르면 같은 프로그램 순서로 다시 볼 수 있습니다.

프로그램 재생 중 반복 재생과 셔플 재생을 선택할 수 있습니다.

프로그램 재생 중 REPEAT(반복) 버튼이나 SHUFFLE(셔플) 버튼을 누릅니다. 자세한 내용은 18페이지의 “임의 순서로 재생하기(셔플 재생)”이나 19페이지의 “반복해서 재생하기(반복 재생)”를 참조하십시오.

주의 사항

- DVD 디스크에 따라서는 프로그램 재생을 할 수 없는 경우도 있습니다.
- 타이틀 번호와 디스크에 저장된 챕터(장)가 표시됩니다.
- 프로그램 재생 설정은 다음과 같은 경우에 삭제됩니다.
 - 디스크 트레이를 열 때
 - ⏻(대기)/RESET(리셋) 버튼을 눌러 재설정할 때
 - ⏻/RESET(리셋) 버튼을 누른 채 스탠바이(대기) 모드로 전환할 때
 - 콘솔 뒷면의 MAIN POWER(주전원) 스위치로 전원을 끌 때
- 프로그램 재생을 설정하면 A↔B 반복은 해제됩니다.

DVD 비디오 보기(계속)

● 임의 순서로 재생하기(셔플 재생)

디스크상의 타이틀 번호와 챕터(장) 번호에 상관없이, 임의 순서로 DVD가 재생됩니다. 이 기능은 DVD 리모컨에서만 조작할 수 있습니다.

SHUFFLE(셔플) 버튼을 누릅니다.

버튼을 누를 때마다 “Title Shuffle” (타이틀 셔플), “Chapter Shuffle” (챕터 셔플), “Shuffle Off” (셔플 끄기) 순으로 전환됩니다.

셔플 재생을 종료하려면

“Shuffle Off” (셔플 끄기)로 설정하거나, CLEAR(삭제) 버튼을 누릅니다.

디스크를 재생하지 않을 때에도 셔플 재생을 설정할 수 있습니다.

SHUFFLE(셔플) 버튼을 누르고 원하는 설정을 선택합니다. ▷ 버튼을 누르면 셔플 재생 모드에서 재생이 시작됩니다.

셔플 재생 중에도 프로그램을 재생하거나, 반복 재생을 할 수 있습니다.

셔플 재생 중에 PROGRAM(프로그램) 버튼이나 REPEAT(반복) 버튼을 누릅니다. 상세한 사항은 16페이지의 “원하는 순서로 재생하기(프로그램 재생)” 나 19페이지의 “반복해서 재생하기(반복 재생)” 를 참조하십시오.

주의 사항

- DVD 디스크에 따라서 셔플 재생이 되지 않는 경우도 있습니다.
- 셔플 재생은 다음과 같은 경우에 해제됩니다.
 - DVD 메뉴나 타이틀 메뉴를 표시했을 때
 - 디스크 트레이를 열었을 때
 - 콘솔 뒷면의 MAIN POWER(주전원) 스위치로 전원을 껐을 때
- 셔플 재생을 설정하면 A↔B 반복이 해제됩니다.
- “Chapter Shuffle” (챕터 셔플)을 선택했을 경우, 디스크 속의 최고 200 개의 챕터(장)를 임의 순서로 재생할 수 있습니다.

● 반복해서 재생하기(반복 재생)

DVD의 모든 타이틀, 혹은 한 타이틀과 챕터(장)를 반복 재생할 수 있습니다. 셔플 재생과 프로그램 재생을 함께 사용하면, 셔플 재생과 프로그램 재생에서 설정된 순서로 반복됩니다. 이 기능은 DVD 리모컨에서만 조작이 가능합니다.

REPEAT(반복) 버튼을 누릅니다.

버튼을 누를 때마다 “Disc Repeat” (디스크 반복), “Title Repeat” (타이틀 반복), “Chapter Repeat” (챕터 반복), “Repeat Off” (반복 끄기) 순서로 전환됩니다.

반복 재생을 종료하려면

“Repeat Off” (반복 끄기)로 설정하거나, CLEAR(삭제) 버튼을 누릅니다.

정지 상태에서도 반복 재생을 설정할 수 있습니다.

REPEAT(반복) 버튼을 누르고 원하는 설정을 선택합니다. ▷
PLAY(재생) 버튼을 눌러 반복 재생 모드에서 재생을 시작합니다.

반복 재생 도중 프로그램 재생이나 셔플 재생을 선택할 수 있습니다.

셔플 재생 중에 PROGRAM(프로그램) 버튼이나 SHUFFLE(셔플) 버튼을 누릅니다. 상세한 사항은 16페이지의 “원하는 순서로 재생하기 (프로그램 재생)” 나 18페이지의 “임의 순서로 재생하기(셔플재생)” 를 참조하십시오.

주의 사항

- DVD 디스크에 따라서 반복 재생이 되지 않는 경우도 있습니다.
- 반복 재생은 다음과 같은 경우에 해제됩니다.
 - 디스크 트레이를 열 때
 - 콘솔 뒷면의 MAIN POWER(주전원) 스위치를 사용하여 전원을 끌 때
- 반복 재생을 설정하면 A↔B 반복은 해제됩니다.

DVD 비디오 보기(계속)

● 선택한 부분만 반복 재생하기(A↔B 반복)

재생중 디스크의 특정 부분을 선정하여 지정한 부분을 반복 재생할 수 있습니다. 어학 학습이나 신곡 연습등에 편리합니다. 이 기능은 DVD 리모컨에서만 조작됩니다.

1 반복 재생할 부분의 시작 지점(A 지점)에서 A↔B 버튼을 누릅니다.

시작 지점이 설정됩니다.

2 반복 재생할 부분의 종료 지점(B 지점)에서 A↔B 버튼을 누릅니다.

선택된 부분이 반복 재생되기 시작합니다.

A↔B 반복을 해제하려면

CLEAR(삭제) 버튼을 누릅니다.

주의 사항

- DVD 디스크에 따라서 A↔B 반복을 설정할 수 없는 경우도 있습니다.
- A↔B 반복은 한 번에 한 부분만 설정할 수 있습니다.
- 설정한 A↔B 반복은, 다음과 같은 경우에 해제됩니다.
 - ■ 버튼을 두 번 눌렀을 때
 - DVD 메뉴나 타이틀 메뉴를 표시했을 때
 - 디스크 트레이를 열었을 때
 - 콘솔 뒤쪽의 MAIN POWER(주전원) 스위치를 사용하여 전원을 끌 때
- A↔B 반복을 설정하면 셔플 재생, 반복 재생, 프로그램 재생은 해제됩니다.

제어판 사용하기

DVD 리모컨으로 제어판의 다양한 기능을 이용할 수 있습니다. DVD 리모컨은 아날로그 컨트롤러(DUALSHOCK®2)보다 많은 추가 기능이 탑재되어 있습니다. 추가 기능에 대한 상세한 사항은 22~24페이지를 참조하여 주십시오.

DVD 리모컨 및 아날로그 컨트롤러(DUALSHOCK®2)에 탑재된 제어판의 기능은 PlayStation®2 콘솔 사용 설명서에 나와 있으며, 다음과 같은 기능이 있습니다.

- DVD 메뉴 사용하기
- 타이틀 메뉴 사용하기
- 음성 언어 변경하기
- 장면 각도(앵글) 변경하기
- 자막 표시하기
- 바로가기 버튼 기능의 리스트 나타내기

상세한 사항은 PlayStation®2 콘솔 사용 설명서의 “제어판 사용하기”를 참조하십시오.

제어판 사용하기(계속)

● 재생할 특정 장면 선택하기

콘솔에 IR 수신기를 부착할 경우 타이틀 번호, 챕터(장) 번호 및 경과 시간을 지정하여 재생할 장면을 검색할 수 있습니다.

- 1 재생중 방향키로 **↶** (Go to Title: 타이틀로 이동) 버튼을 선택한 다음, **X** 버튼을 누릅니다.
- 2 방향키로 지정할 항목을 선택한 다음, **X** 버튼을 누릅니다.
 - Title(타이틀) = 타이틀 번호를 지정합니다.
 - Chapter(챕터) = 챕터(장) 번호를 지정합니다.
 - C -:-:- (또는 T -:-:-) = 챕터(또는 타이틀)의 경과 시간을 지정합니다.
- 3 DVD 리모컨의 숫자버튼으로 해당되는 필드 번호를 선택합니다. 선택된 장면의 재생이 시작됩니다.

IR 수신기가 콘솔에 연결되어 있지 않을 때

타이틀 번호만 지정할 수 있습니다.

- 1 재생중 방향키로 **↶** (Go to Title: 타이틀로 이동) 버튼을 선택한 다음, **X** 버튼을 누릅니다.
- 2 방향키로 재생할 타이틀의 숫자를 선택합니다.
제어판의 숫자 버튼으로 챕터(장) 번호를 지정할 수도 있습니다.

주의 사항

챕터(장)나 타이틀의 남은 시간을 지정하여 장면을 선택할 수는 없습니다. (경과한 시간만 사용할 수 있습니다)

● 타이틀 번호와 챕터(장) 번호 표시하기

디스크를 재생하거나 일시 정지하고 있는 동안 방향키로  (Chapter Display: 장 표시)를 선택한 다음, X 버튼을 누릅니다. X 버튼을 누를 때마다 표시 내용이 표기되거나 삭제됩니다.

경과 시간과 남은 시간을 표시하려면

DVD 리모컨의 TIME(시간) 버튼을 여러번 누릅니다. 버튼을 누를 때마다 타이틀 번호와 챕터(장) 번호 옆의 표시 내용이 다음과 같이 전환됩니다.

재생중인 챕터(장)의 경과 시간 → 재생중인 챕터(장)의 남은 시간
→ 재생중인 타이틀의 경과 시간 → 재생중인 타이틀의 남은 시간 → 표시하지 않기 → 타이틀 번호와 챕터(장) 번호 → 재생중인 챕터(장)의 경과 시간 → ...

C -:-:- = 재생중인 챕터(장)의 경과 시간

C --:-:- = 재생중인 챕터(장)의 남은 시간

T -:-:- = 재생중인 타이틀의 경과 시간

T --:-:- = 재생중인 타이틀의 남은 시간

IR 수신기가 연결되어 있지 않을 때

재생중인 타이틀과 챕터(장) 번호만 표시할 수 있습니다.

KR

제어판 사용하기(계속)

● 디스크의 특정한 지점 찾기

디스크 재생중, 앞으로 찾기 혹은 뒤로 찾기를 사용하여 디스크의 특정 지점을 신속히 찾을 수 있습니다.

주의 사항

DVD에 따라서는 찾기 기능을 사용할 수 없는 경우가 있습니다.

신속히 해당지점으로 찾아가기

- 1 디스크 재생중 방향키로 ⏩ (앞으로 빨리가기)나 ⏪ (뒤로 빨리가기)를 선택한 다음, X 버튼을 계속해서 누릅니다.
- 2 원하는 지점이 나오면 X 버튼을 놓습니다.

직접 해당 지점을 검색할 수 있습니다.

화면을 보면서 원하는 지점이 나올 때까지 DVD 리모컨의 ⏪ 또는 ⏩ SCAN(스캔) 버튼을 누릅니다.

보고 싶은 지점을 찾으면 ▷ PLAY(재생) 버튼을 누릅니다.

⏪ 또는 ⏩ SCAN(스캔) 버튼을 누를 때마다 찾는 속도가 전환됩니다. (3단계 속도)

느린 동작 재생 상태에서 찾으려면

- 1 재생중 방향키로 ▶ (천천히)를 선택한 다음, X 버튼을 누릅니다.
느린 동작 재생이 시작됩니다.
- 2 원하는 지점이 나오면 ▶ Play(재생)를 선택하고 X 버튼을 누릅니다.
정상 속도 재생이 재개됩니다.

직접 느린 동작 재생을 선택할 수 있습니다.

DVD 리모컨의 ◀ 또는 ▶ SLOW(천천히) 버튼을 누르고 화면을 보면서 원하는 지점을 찾습니다. 찾는 지점이 나오면 ▷ PLAY(재생) 버튼을 누릅니다.

고장이라고 생각될 때

DVD 리모컨이 정상적으로 작동되지 않으면, 아래 항목을 한번 더 점검해 주십시오.

다음과 같은 트러블이 생겼을 경우, 수리를 의뢰하시기 전에 문제를 해결할 수 있도록 이 페이지를 활용해 주십시오.

문제가 계속 발생할 경우, 각 해당 국가 및 지역의 PlayStation® 인포메이션 센터로 연락해 주십시오.

작동

DVD 리모컨이 작동되지 않습니다.

- ➔ DVD 리모컨과 PlayStation®2 콘솔 사이에 장애물이 있습니다.
- ➔ DVD 리모컨과 콘솔 간의 거리가 너무 멍니다.
- ➔ DVD 리모컨이 PlayStation®2 콘솔에 연결된 IR 수신기에 향하지 않은 채 작동되었습니다.
- ➔ DVD 리모컨 전지가 모두 소모되었습니다.
- ➔ 다른 기기에 DVD 리모컨을 사용하고 있습니다.
- ➔ IR 수신기가 콘솔의 컨트롤러 포트에 제대로 연결되어 있지 않습니다.
- ➔ IR 수신기가 직사광선 또는 조명기기의 불빛과 같은 강한 빛에 노출되어 있습니다.
- ➔ PlayStation®2 또는 PlayStation® 규격 소프트웨어를 재생하고 있습니다.
DVD 리모컨의 버튼으로 조작할 경우, 일부 PlayStation®2 및 PlayStation® 규격 소프트웨어에서 제대로 작동하지 않을 수 있습니다.
또한, 여러 버튼 (2개 이상)을 한꺼번에 눌렀을 경우에도 작동하지 않습니다.

KR

고장이라고 생각될 때(계속)

화질

DVD 플레이어로 DVD를 볼 때 화면에 노이즈가 나타나면

➔ 잘못 설치되었습니다. 컴퍼넌트 AV 케이블(PlayStation®2 전용)로 연결할 경우, 시스템 설정 메뉴에서 “Component Video Out” (컴퍼넌트 영상 출력) 옵션을 “Y,Cb/Pb,Cr/Pr”로 설정해 주십시오. 상세한 사항은 PlayStation®2 콘솔의 사용설명서를 참조해 주십시오.

DVD 비디오 작동

DVD의 디스크가 처음부터 재생되지 않습니다.

➔ 프로그램 재생, 셔플 재생, 반복 재생 또는 A↔B 반복이 설정되어 있습니다.

이와 같은 특수 재생 모드를 삭제하는 방법은 사용설명서(16~20 페이지)의 해당 지시 사항을 참조하십시오.

사양

- 전원 공급 : 3V DC(Size AAA 전지 × 2)
- 크기(약) : 59 × 159 × 17mm(w/h/d)
- 무게(약) : 72g(전지 무게 제외)
- 주변 장치 : 4페이지 참조
- 전지 수명 : 정상 작동 방법으로 사용할 경우 약 6개월 유지됩니다.
전지가 모두 소모되면 DVD 리모컨은 정상적으로 작동되지 않거나 작동 거리가 평소보다 짧아집니다. 이러한 경우 두 개의 전지 모두 새 것으로 교체해 주십시오.

디자인이나 사양은 예고없이 변경될 수도 있습니다.

KR



“”, “PlayStation” and “DUALSHOCK” are registered trademarks and “ $\Delta \circ \times \square$ ” is a trademark of Sony Computer Entertainment Inc.

“SONY” is a registered trademark and “” is a trademark of Sony Corporation.

“”, “PlayStation” 和 “DUALSHOCK” 為 Sony Computer Entertainment Inc 的註冊商標， “ $\Delta \circ \times \square$ ” 為 Sony Computer Entertainment Inc 的商標。

“SONY” 為 Sony Corporation 之註冊商標， “” 則為該公司之商標。

“”, “PlayStation” 및 “DUALSHOCK”는 Sony Computer Entertainment Inc. 의 등록 상표이며 “ $\Delta \circ \times \square$ ”는 같은 회사의 등록 상표입니다.

“SONY”는 Sony Corporation 의 등록상표이며 “”는 같은 회사의 상표입니다.